


CDP-C515

SERVICE MANUAL

US Model
Canadian Model

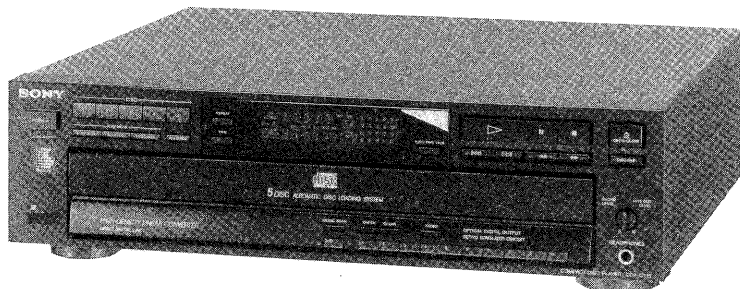

Model Name Using Similar Mechanism	CDP-C312M
CD Mechanism Type	CDM16E2-5BD3
Optical Pick-Up Block Type	BU-5BD3

SPECIFICATIONS

System	Compact disc digital audio system
Laser	Semiconductor laser ($\lambda=780$ nm) Emission duration: continuous
Laser output	Max. $44.6 \mu\text{W}^*$ * This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.
Frequency response	2 Hz – 20 kHz (± 0.5 dB)
Signal to noise ratio	More than 100 dB
Dynamic range	More than 98 dB
Harmonic distortion	Less than 0.005% (1 kHz)
Channel separation	More than 100 dB (1 kHz)
Wow and flutter	Below measurable limit

Outputs

LINE OUT (FIXED) (phone jacks)	Output level 2 V (at 50 kilohms) Load impedance over 10 kilohms
LINE OUT (VARIABLE) (phono jacks)	Output level max. 2 V (at 50 kilohms) Load impedance over 10 kilohms
DIGITAL OUT (OPTICAL) (optical output connector)	Wave length 660 nm Output level – 18 dBm
HEADPHONES (stereo phone jack)	Output level max. 10 mW Load impedance 32 ohms

General

Power requirements	120 V AC, 60 Hz
Power consumption	12 W
Dimensions	Approx. $430 \times 125 \times 385$ mm (w/h/d) ($17 \times 5 \times 15\frac{1}{4}$ inches) not including projecting parts and controls
Weight	Approx. 6 kg (13 lbs 4 oz), net

Remote commander RM-D515

Remote control system	Infrared control
Power requirements	3 V DC with two batteries size AA (IEC esignation R6)

Supplied accessories

Connecting cord (1)
(2 phono plugs $\leftrightarrow$ 2 phono plugs)
Remote commander (1)
Size AA batteries (2)
Operating Manual (1)

Optional accessory

Audio Optical connecting cord POC-15

Design and specifications subject to change without notice.

COMPACT DISK PLAYER
SONY®

Note on the Transit Key

The transit key on the bottom exterior of the unit protects the optical system against shock during transportation. Before operating the CD player, be sure to remove the key by following the instructions on the label, and store it in a safe place.

When transporting the unit, replace the key in its original hole and lock it in place.

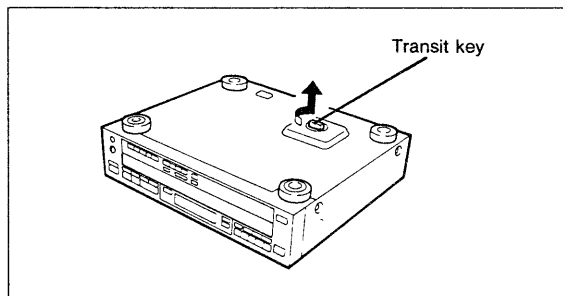


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. EXPLODED VIEWS		
1-1. Location of Controls		5	5-1. Front Panel and Case Assemblies		21
2. DISASSEMBLY			5-2. Disc Tray Assembly		22
2-1. Removal of Front Panel and Case Assemblies		6	5-3. Chassis Assembly		23
2-2. Removal of Disc Tray Assembly		6	5-4. Optical Pick-up Block Assembly (BU-5BD3)		24
2-3. Removal of Optical Pick-up Block Assembly		6	6. ELECTRICAL PARTS LIST		25
3. ELECTRICAL BLOCK CHECKING		7			
4. DIAGRAMS					
4-1. Circuit Boards Location		9			
4-2. Semiconductor Lead Layouts		9			
4-3. IC Block Diagrams		10			
4-4. Printed Wiring Boards		12			
4-5. Schematic Diagram		17			

SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MODEL IDENTIFICATION

—Model Number Label—

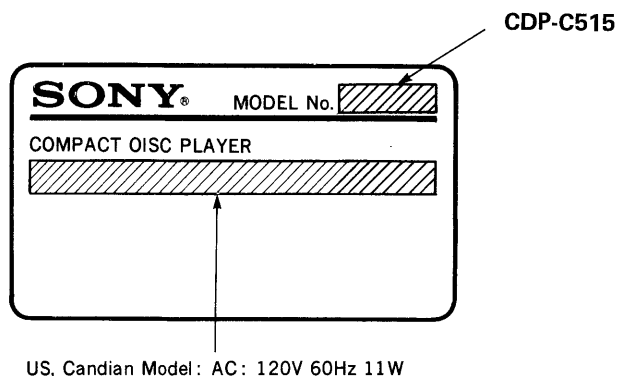

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30cm away from the objective lens.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

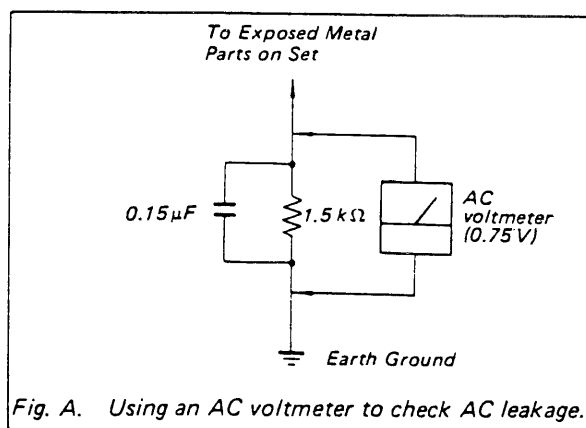


Fig. A. Using an AC voltmeter to check AC leakage.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

1. Laser Diode Properties

- Material: GaAlAs
 - Wavelength: 780 nm
 - Emission Duration: continuous
 - Laser Output Power: less than 44.6 μ W*
- * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

2. During service, do not take the Optical Pick-up Block apart, and do not adjust the APC circuit. If there is a breakdown in the APC circuit (including laser diode), replace the entire Optical Pick-up Block (including APC board).

BESKYTTELSE AF ØJNE MOD LASERSTRÅLING UNDER SERVICE

I dette apparat anvendes laserlys. Derfor skal nedenstående instruktioner nøje følges under service.

Følg iøvrigt instruktionerne i servicemanualen.

ADVARSEL!!

Under service må øjnene ikke komme nær objektiv-linsen på den optiske pick-up enhed. I tilfælde af at det er nødvendigt at kontrollere udsendelsen af laserlys, skal det ske i en afstand af mere end 25 cm fra den optiske pick-up.

1. Laser-didoe data


- Materiale: GaAlAs
 - Bølgelængde: 780 nm
 - Udstråling: Kontinuerlig
 - Laseroutput: Max. 0,4 mW*
- * Målt i 1,6 mm afstand fra overfladen af objektiv-linsen på den optiske pick-up enhed.
- Klassifikation: Klasse IIIb.

2. Adskil aldrig den optiske pick-up enhed under service, og juster ikke APC kredsløbet (Automatic Power Control). Hvis APC kredsløbet (incl. laserdioden) bryder ned, skal hele den optiske pick-up enhed (incl. APC printkortet) udskiftes.

LASER ADVARSEL MÆRKNING

Følgende mærkning findes indvendig i apparatet:

1. Advarsel Mærkning

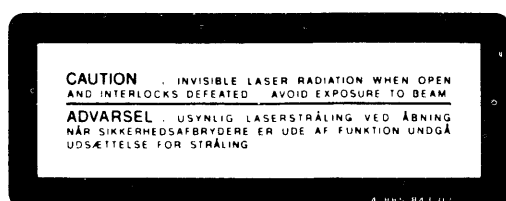


VAROITUS: Laite sisältää, laserdiodin, joka lähettää (näkömätöntä) silmille vaarallista lasersäteilyä.

SECTION 1


GENERAL

1-1. LOCATION OF CONTROLS

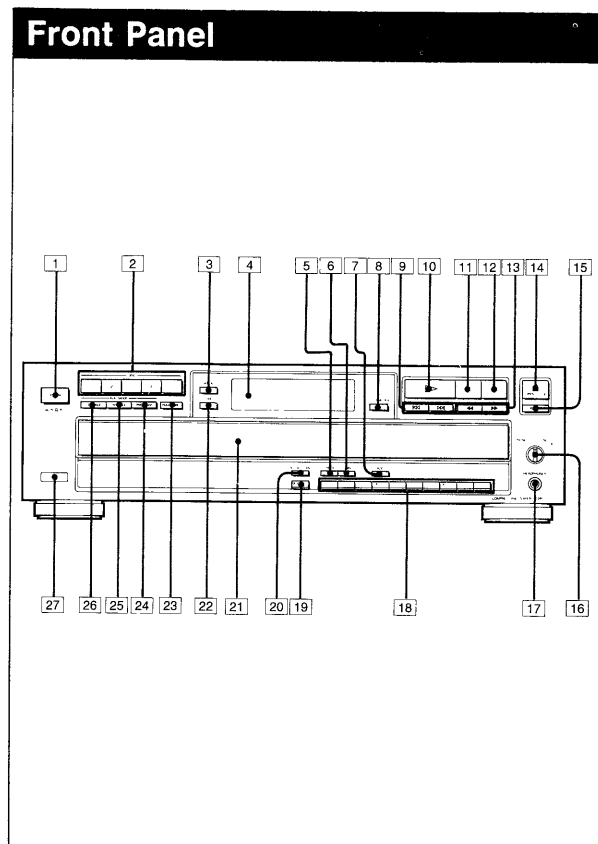

- 1 POWER switch
- 2 DISC 1-5 buttons
- 3 REPEAT button
- 4 Display window
- 5 CHECK (program check) button
- 6 CLEAR (program clear) button
- 7 FADER button
- 8 EDIT/TIME FADE button
- 9 AMS* buttons
- 10 (play) button
- 11 (pause) button
- 12 (stop) button
- 13 (manual search) buttons
- 14 OPEN/CLOSE button
- 15 DISC SKIP button
- 16 LINE OUT/PHONE LEVEL control
- 17 HEADPHONES jack
- 18 Numeric buttons (1-10)
- 19 > 10 (OVER 10) button
- 20 MUSIC SCAN button
- 21 Disc tray
- 22 TIME button
- 23 PEAK SEARCH button
- 24 PROGRAM button
- 25 SHUFFLE button
- 26 CONTINUE button
- 27 Remote sensor


* AMS is the abbreviation of Automatic Music Sensor.

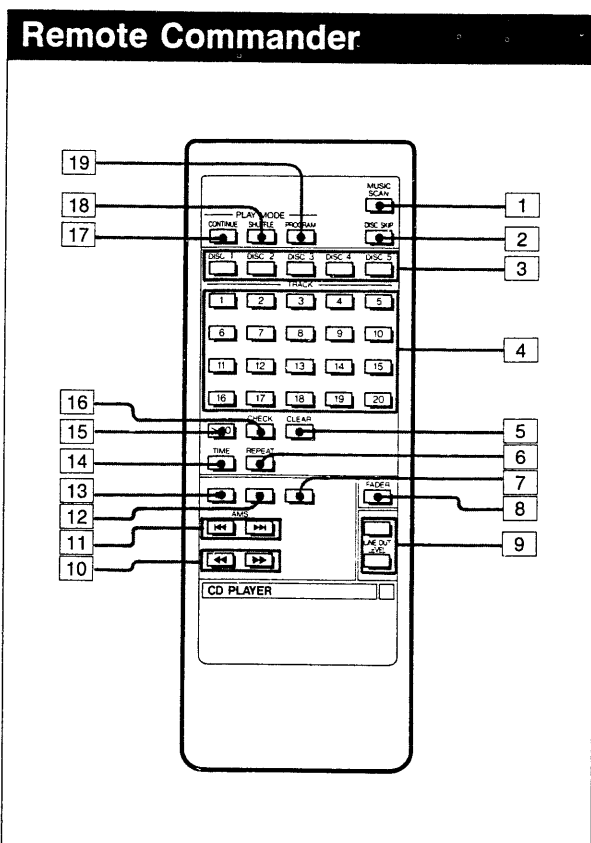


- 1 MUSIC SCAN button
- 2 DISC SKIP button
- 3 DISC 1-5 buttons
- 4 Numeric buttons
- 5 CLEAR (program clear) button
- 6 REPEAT button
- 7 (stop) button
- 8 FADER button
- 9 LINE OUT LEVEL buttons
- 10 (manual search) buttons
- 11 AMS buttons
- 12 (pause) button
- 13 (play) button
- 14 TIME button
- 15 > 20 (over 20) button
- 16 CHECK (program check) button
- 17 CONTINUE button
- 18 SHUFFLE button
- 19 PROGRAM button

SECTION 2 DISASSEMBLY

2-1. REMOVAL OF FRONT PANEL AND CASE ASSEMBLIES

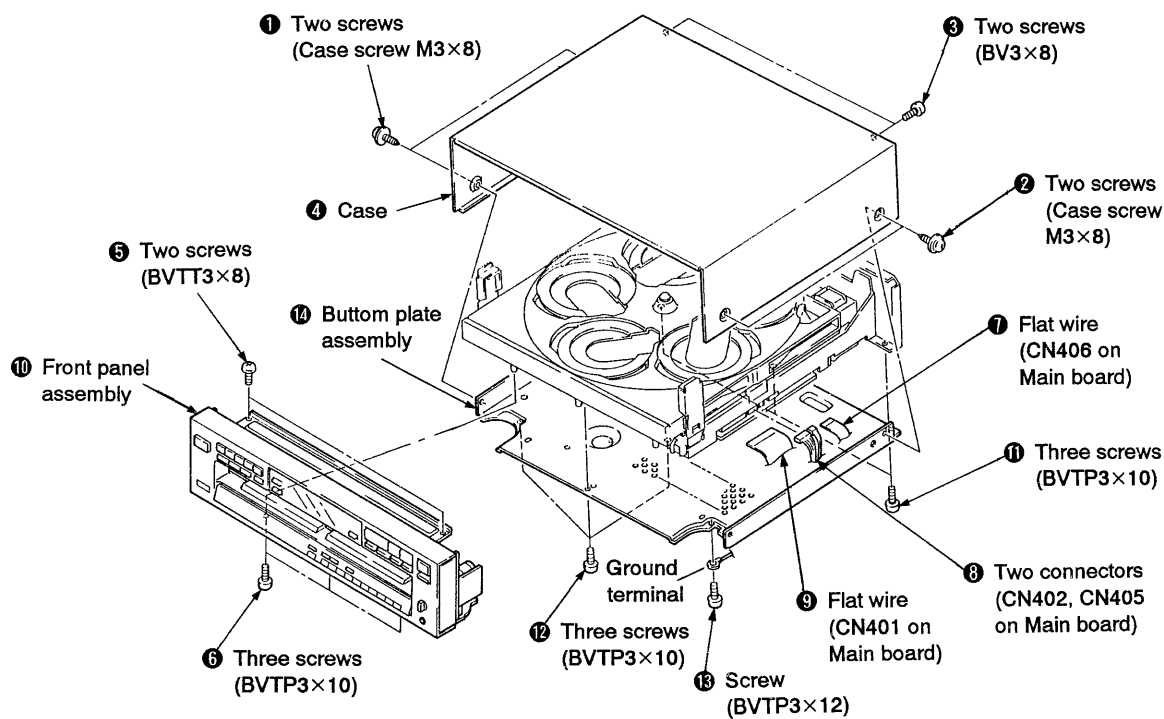


2-2. REMOVAL OF DISC TRAY ASSEMBLY

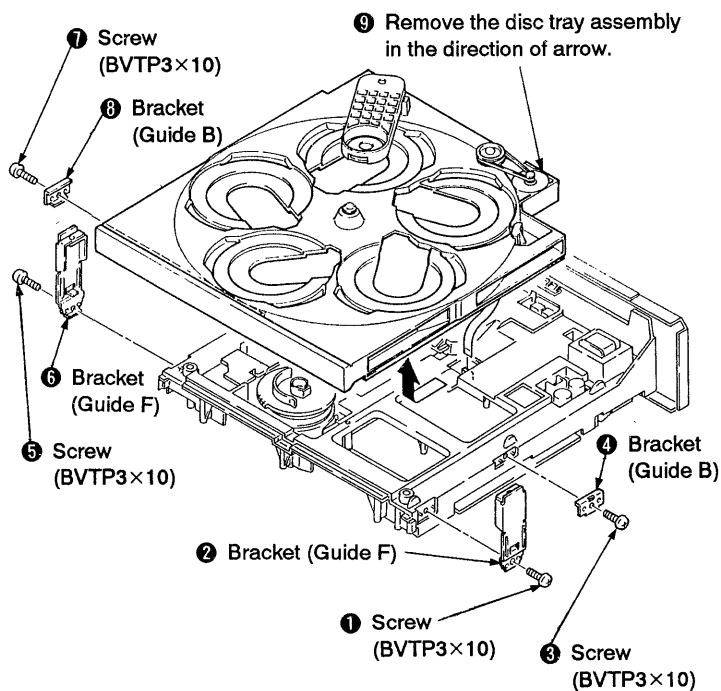

2-3. REMOVAL OF OPTICAL PICK-UP BLOCK ASSEMBLY

1) Replace the set up side down.

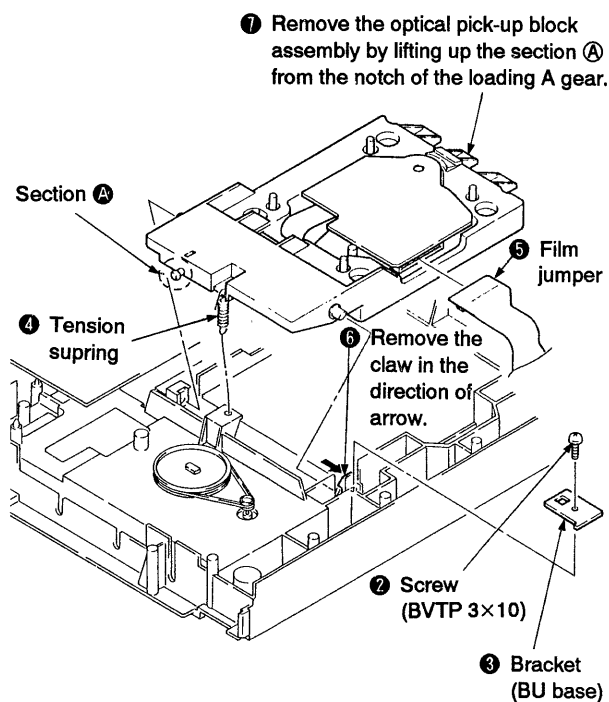


SECTION 3 ELECTRICAL BLOCK CHECKING

Note :


1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than $10M\Omega$ impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

S Curve Check

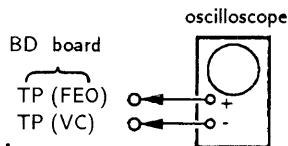

Procedure :

1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FES) and TP (VC) by lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within $3\pm 1V_{p-p}$.

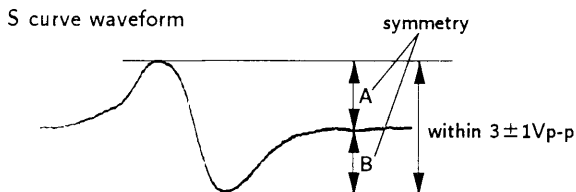


5. After check, remove the lead wire connected in step 2.

Note : • Try to measure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.

- Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

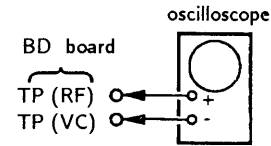


Procedure :


1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note :

Clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

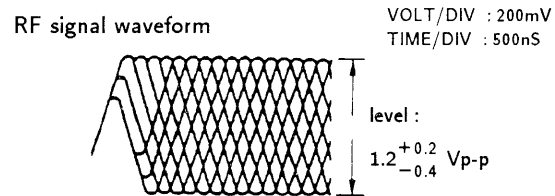


E-F Balance Check

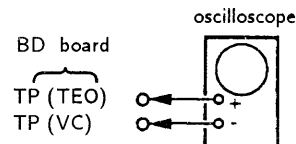

Procedure :

1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

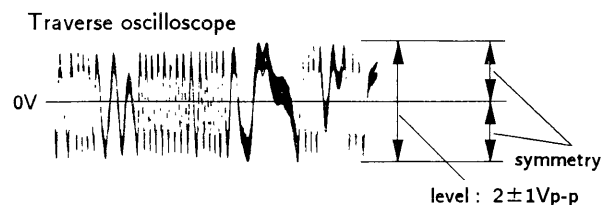


6. Remove the lead wire connected in step 1.

RF PLL Free-run Frequency Check

Procedure :


- 1. Connect frequency counter to test point (PCK) with lead wire.
- 2. Turn Power switch on.
- 3. Confirm that reading on frequency counter is 4. 3218MHz.

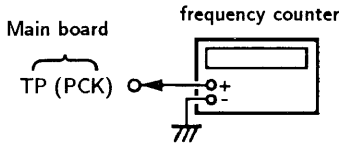


Focus/Tracking Gain

This gain has a margin, so even if it is slightly off. There is no problem. Therefore, do not perform, this adjustment. Please note that it should be fixed to mechanical center position when you moved and do not know original position.


Adjustment Locations :
[BD board]

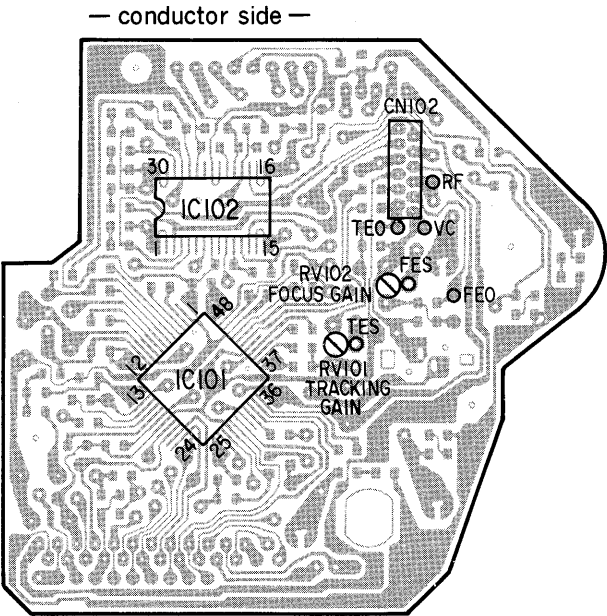


[Main board]

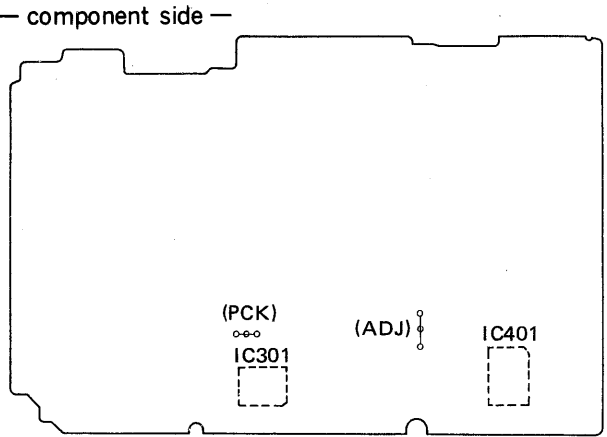

4-1. CIRCUIT BOARDS LOCATION

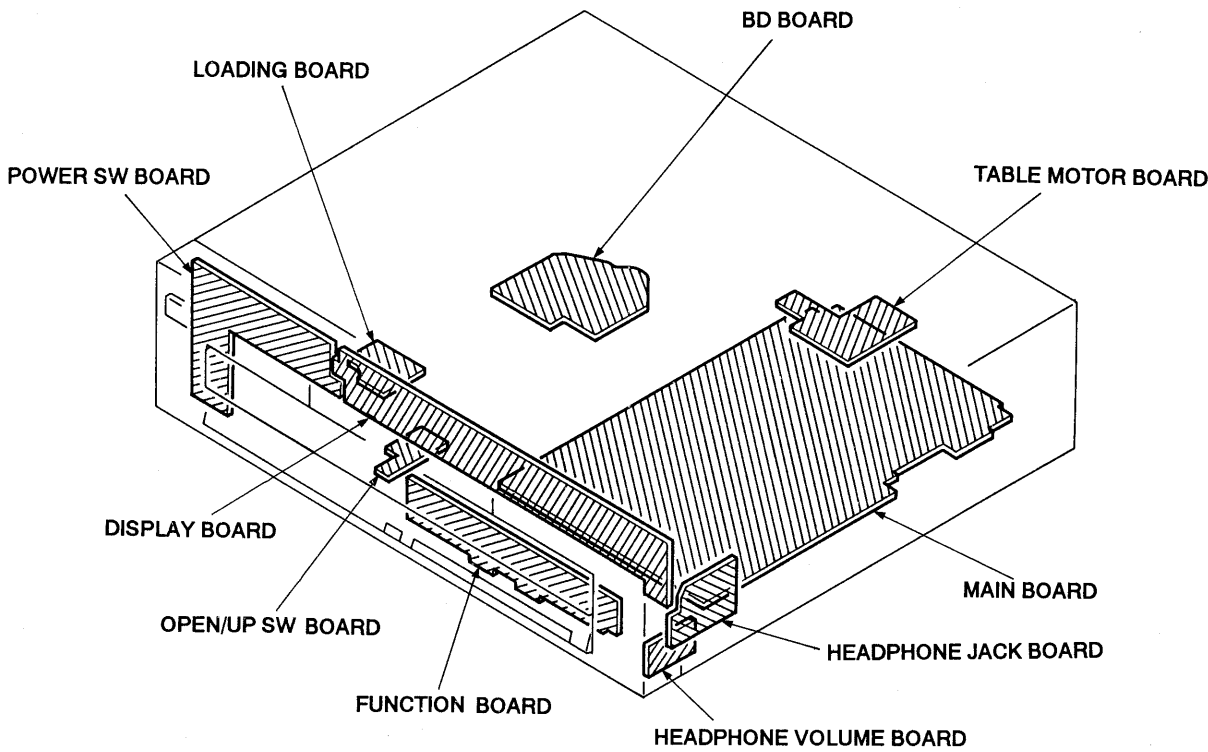


4-2. SEMICONDUCTOR LEAD LAYOUTS

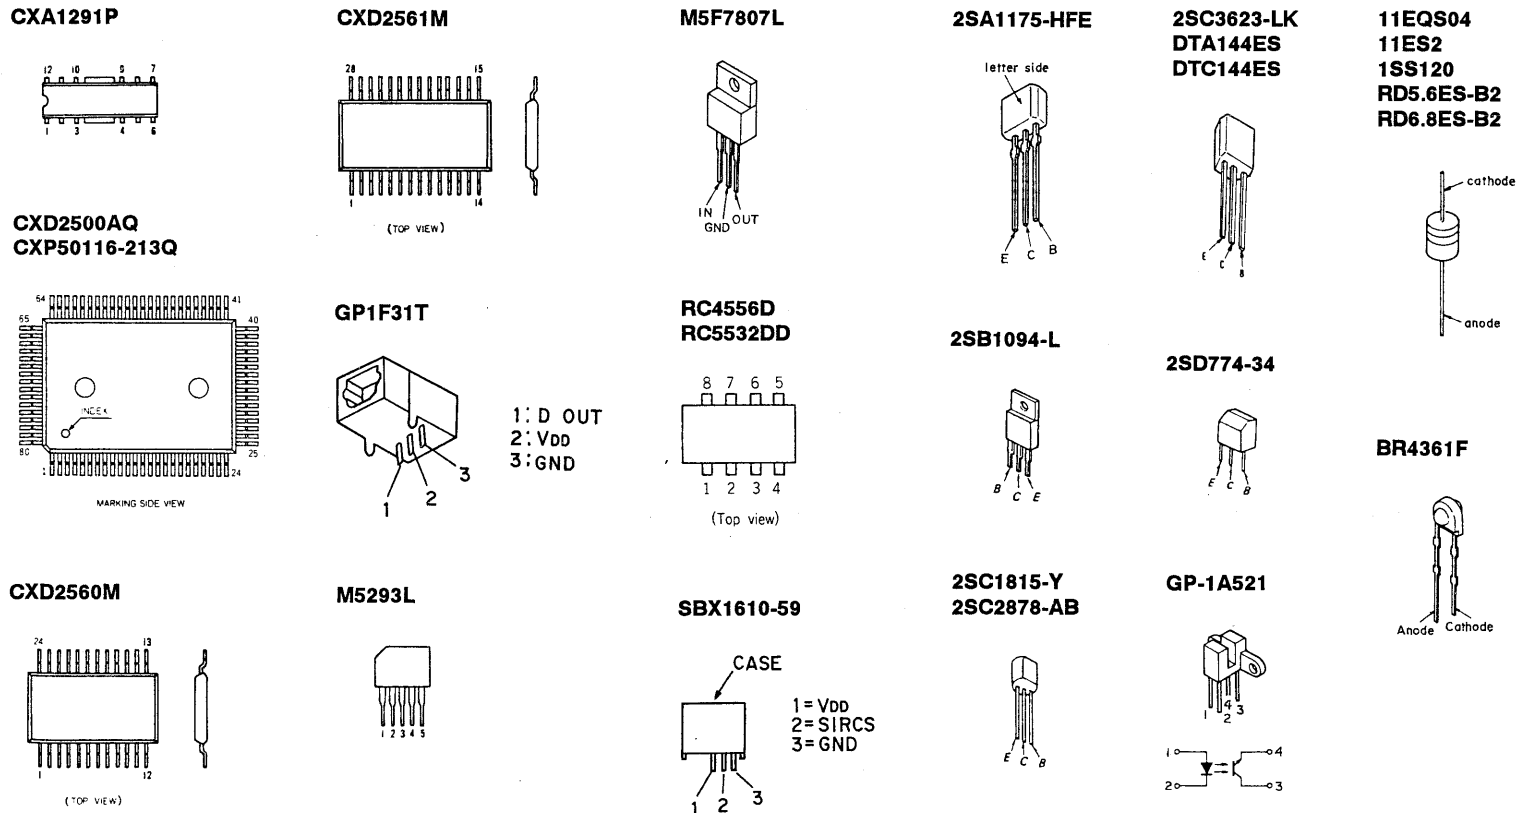


4-3. IC BLOCK DIAGRAMS


IC101 CXA1372Q

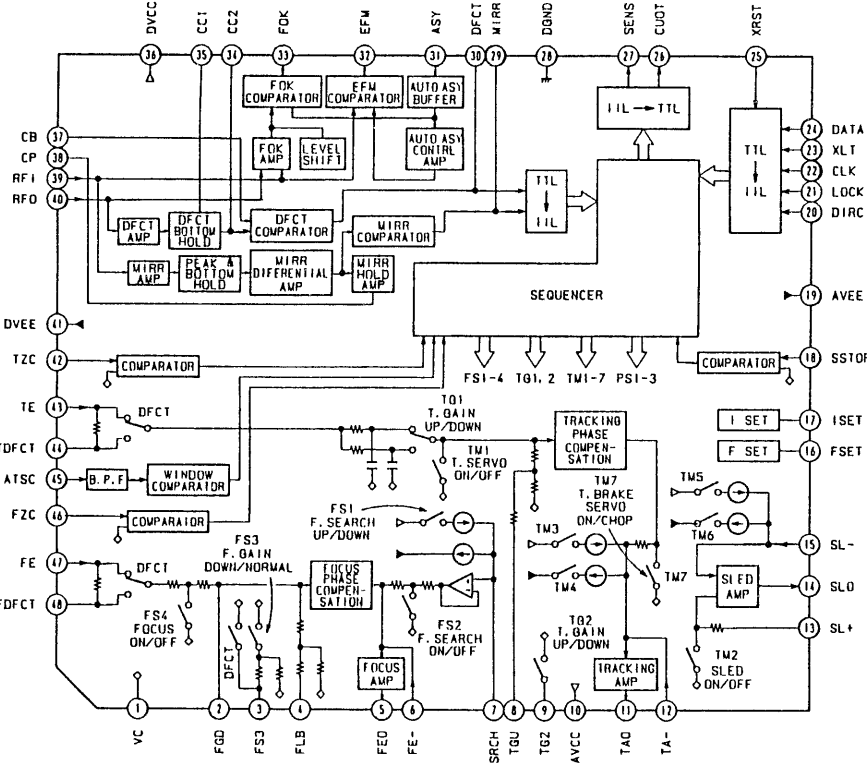


IC102 LA6532M

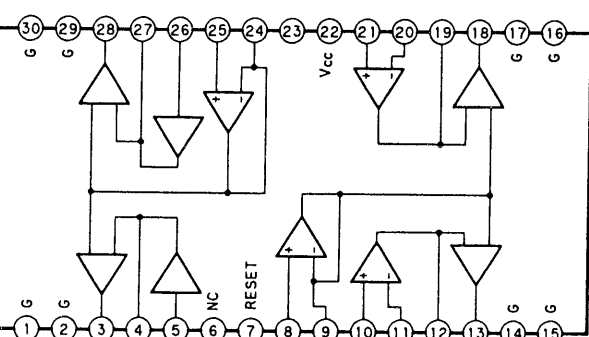


IC201 M5293L

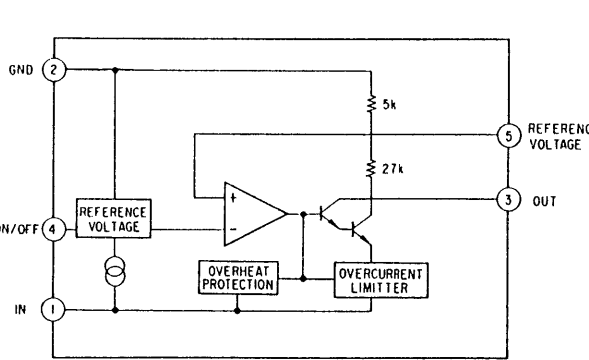

IC202 M5290P-16

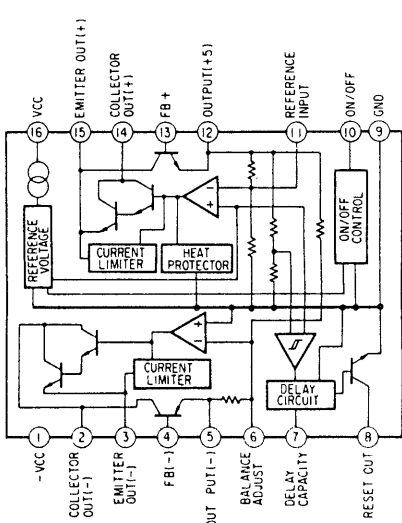

IC301 CXD2500Q

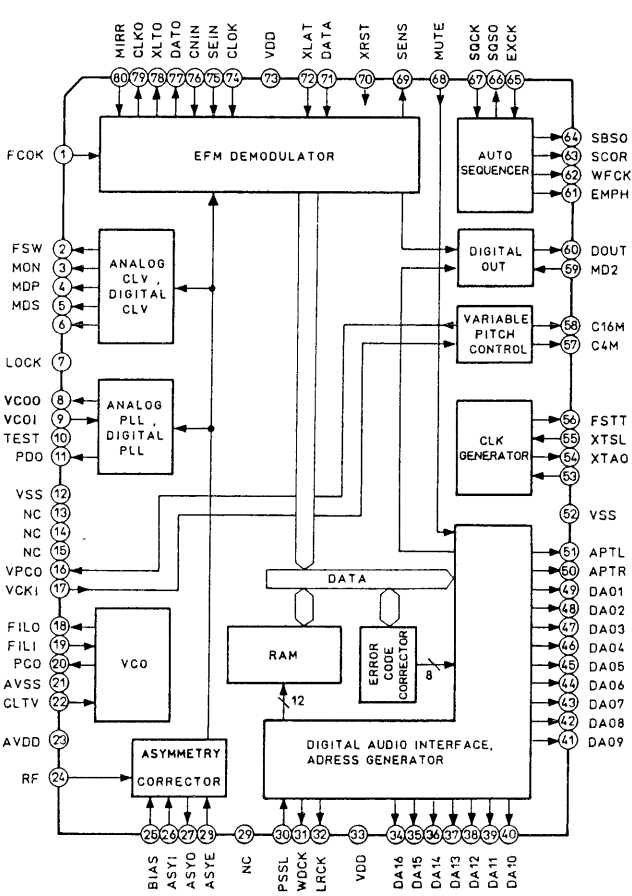

4-4. PRINTED WIRING BOARDS


- Refer to page 9 for Semiconductor Lead Layouts

- **Semiconductor Location**


Ref. No.	Location
D201	I-25
D202	I-25
D203	E-24
D204	E-24
D205	E-24
D206	E-24
D208	E-19
D209	E-19
D341	H-21
D351	H-21
D701	B-4 (HP VOL.)
D701	H-30 (TABLE)
I0101	D-29
I0102	C-29
I0201	I-24
I0202	F-23
I0203	F-20
I0204	G-24
I0301	J-21
I0302	I-23
I0303	G-21
I0306	F-18
I0307	F-18
I0308	H-26
I0309	E-17
I0401	I-17
I0402	G-16
I0551	G-14
Q101	E-29
Q201	J-25
Q202	F-23
Q203	F-23
Q204	G-23
Q205	F-23
Q206	F-23
Q209	F-21
Q341	F-16
Q342	F-16
Q343	F-16
Q344	H-21
Q371	G-17
Q372	E-17
Q373	F-17
Q374	F-17
Q375	F-17
Q376	F-17
Q401	I-16

Note:

- ○ : parts extracted from the component side.
- ● : Through hole.
- ▨ : Pattern on the side which is seen.
- ▩ : Pattern of the rear side.

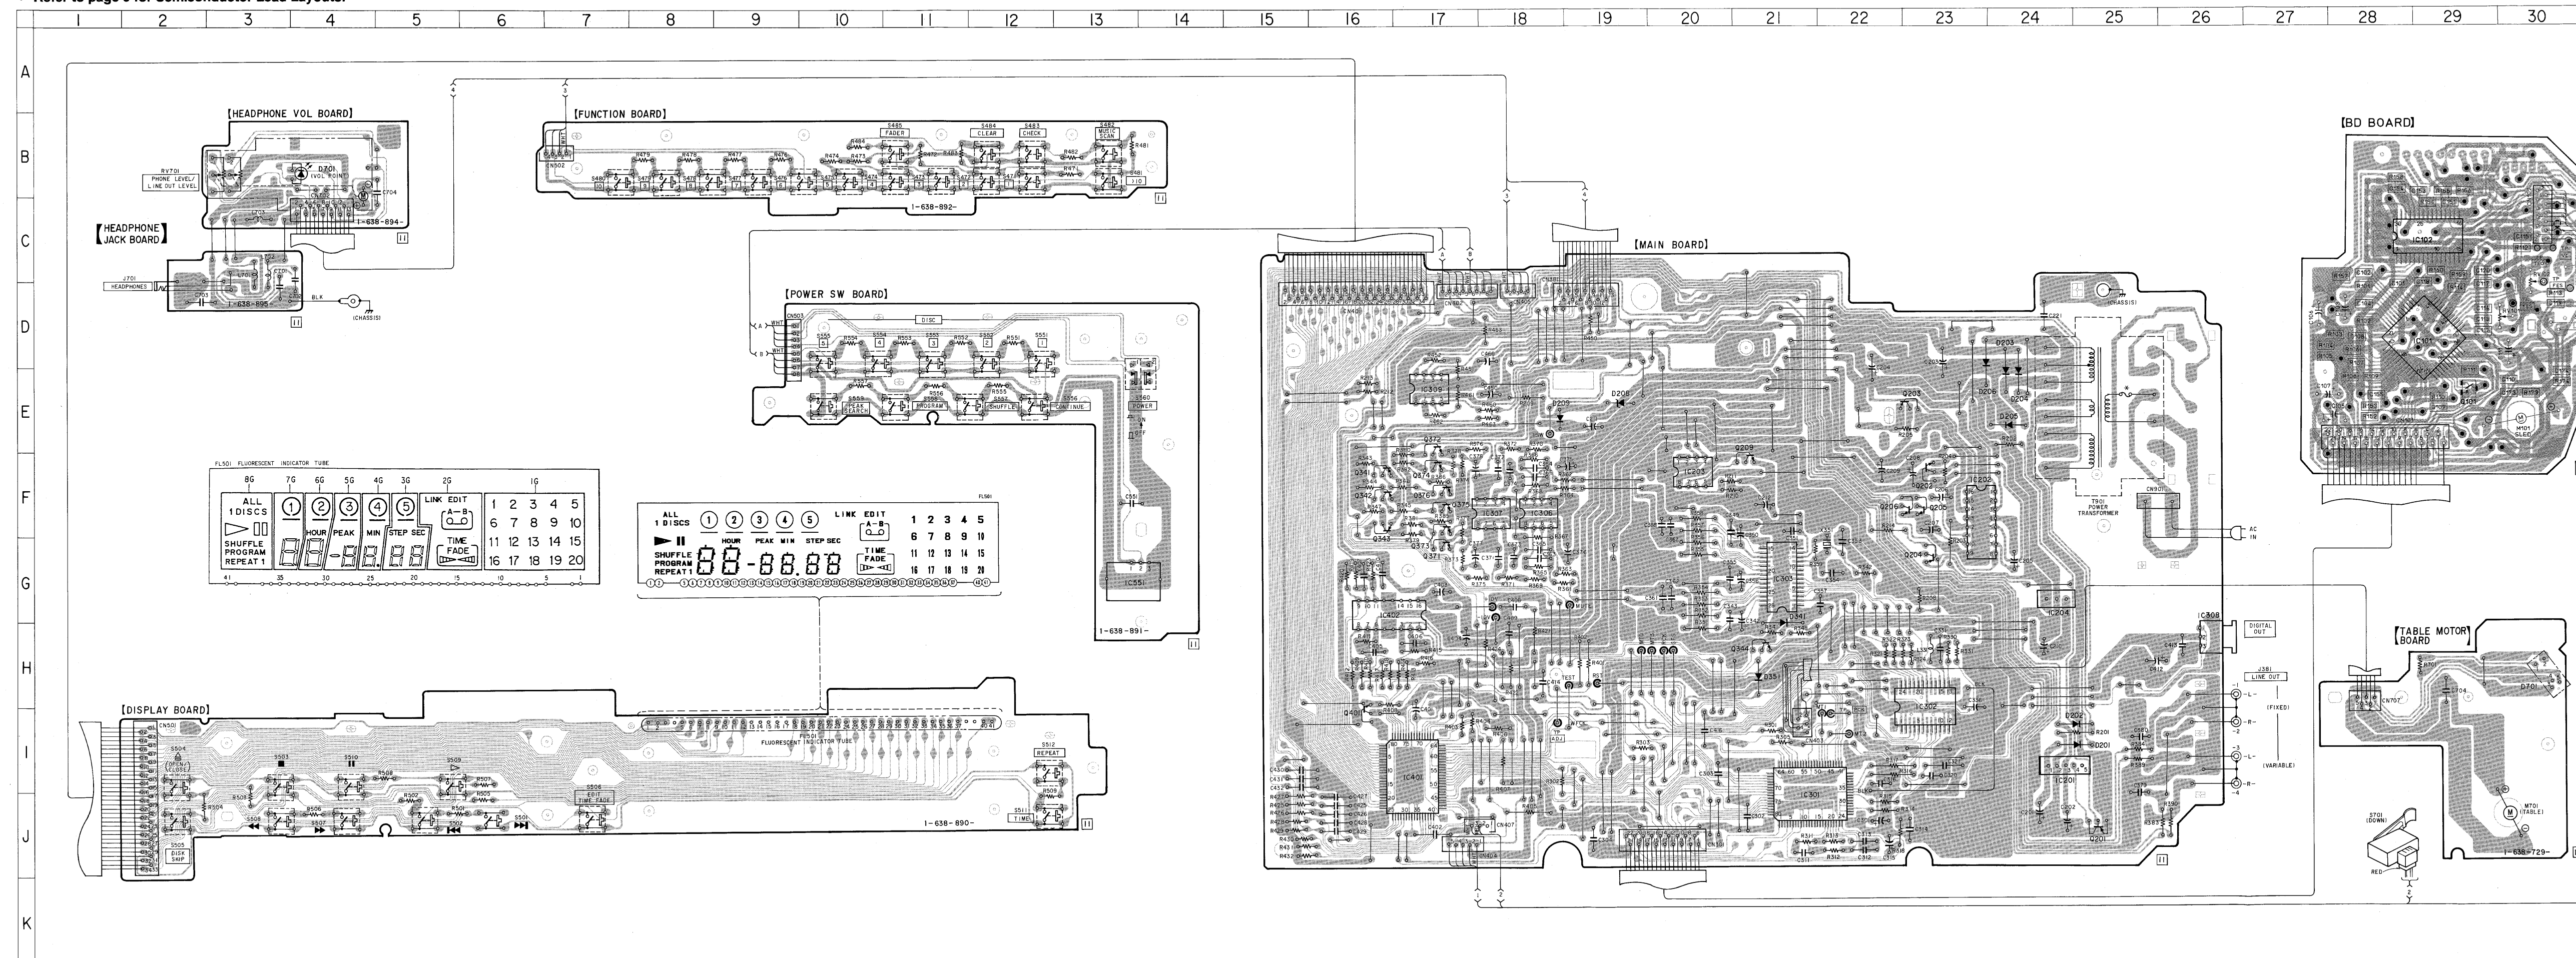

4-5. SCHEMATIC DIAGRAM
 • Refer to page 10 for IC BLOCK Diagrams.

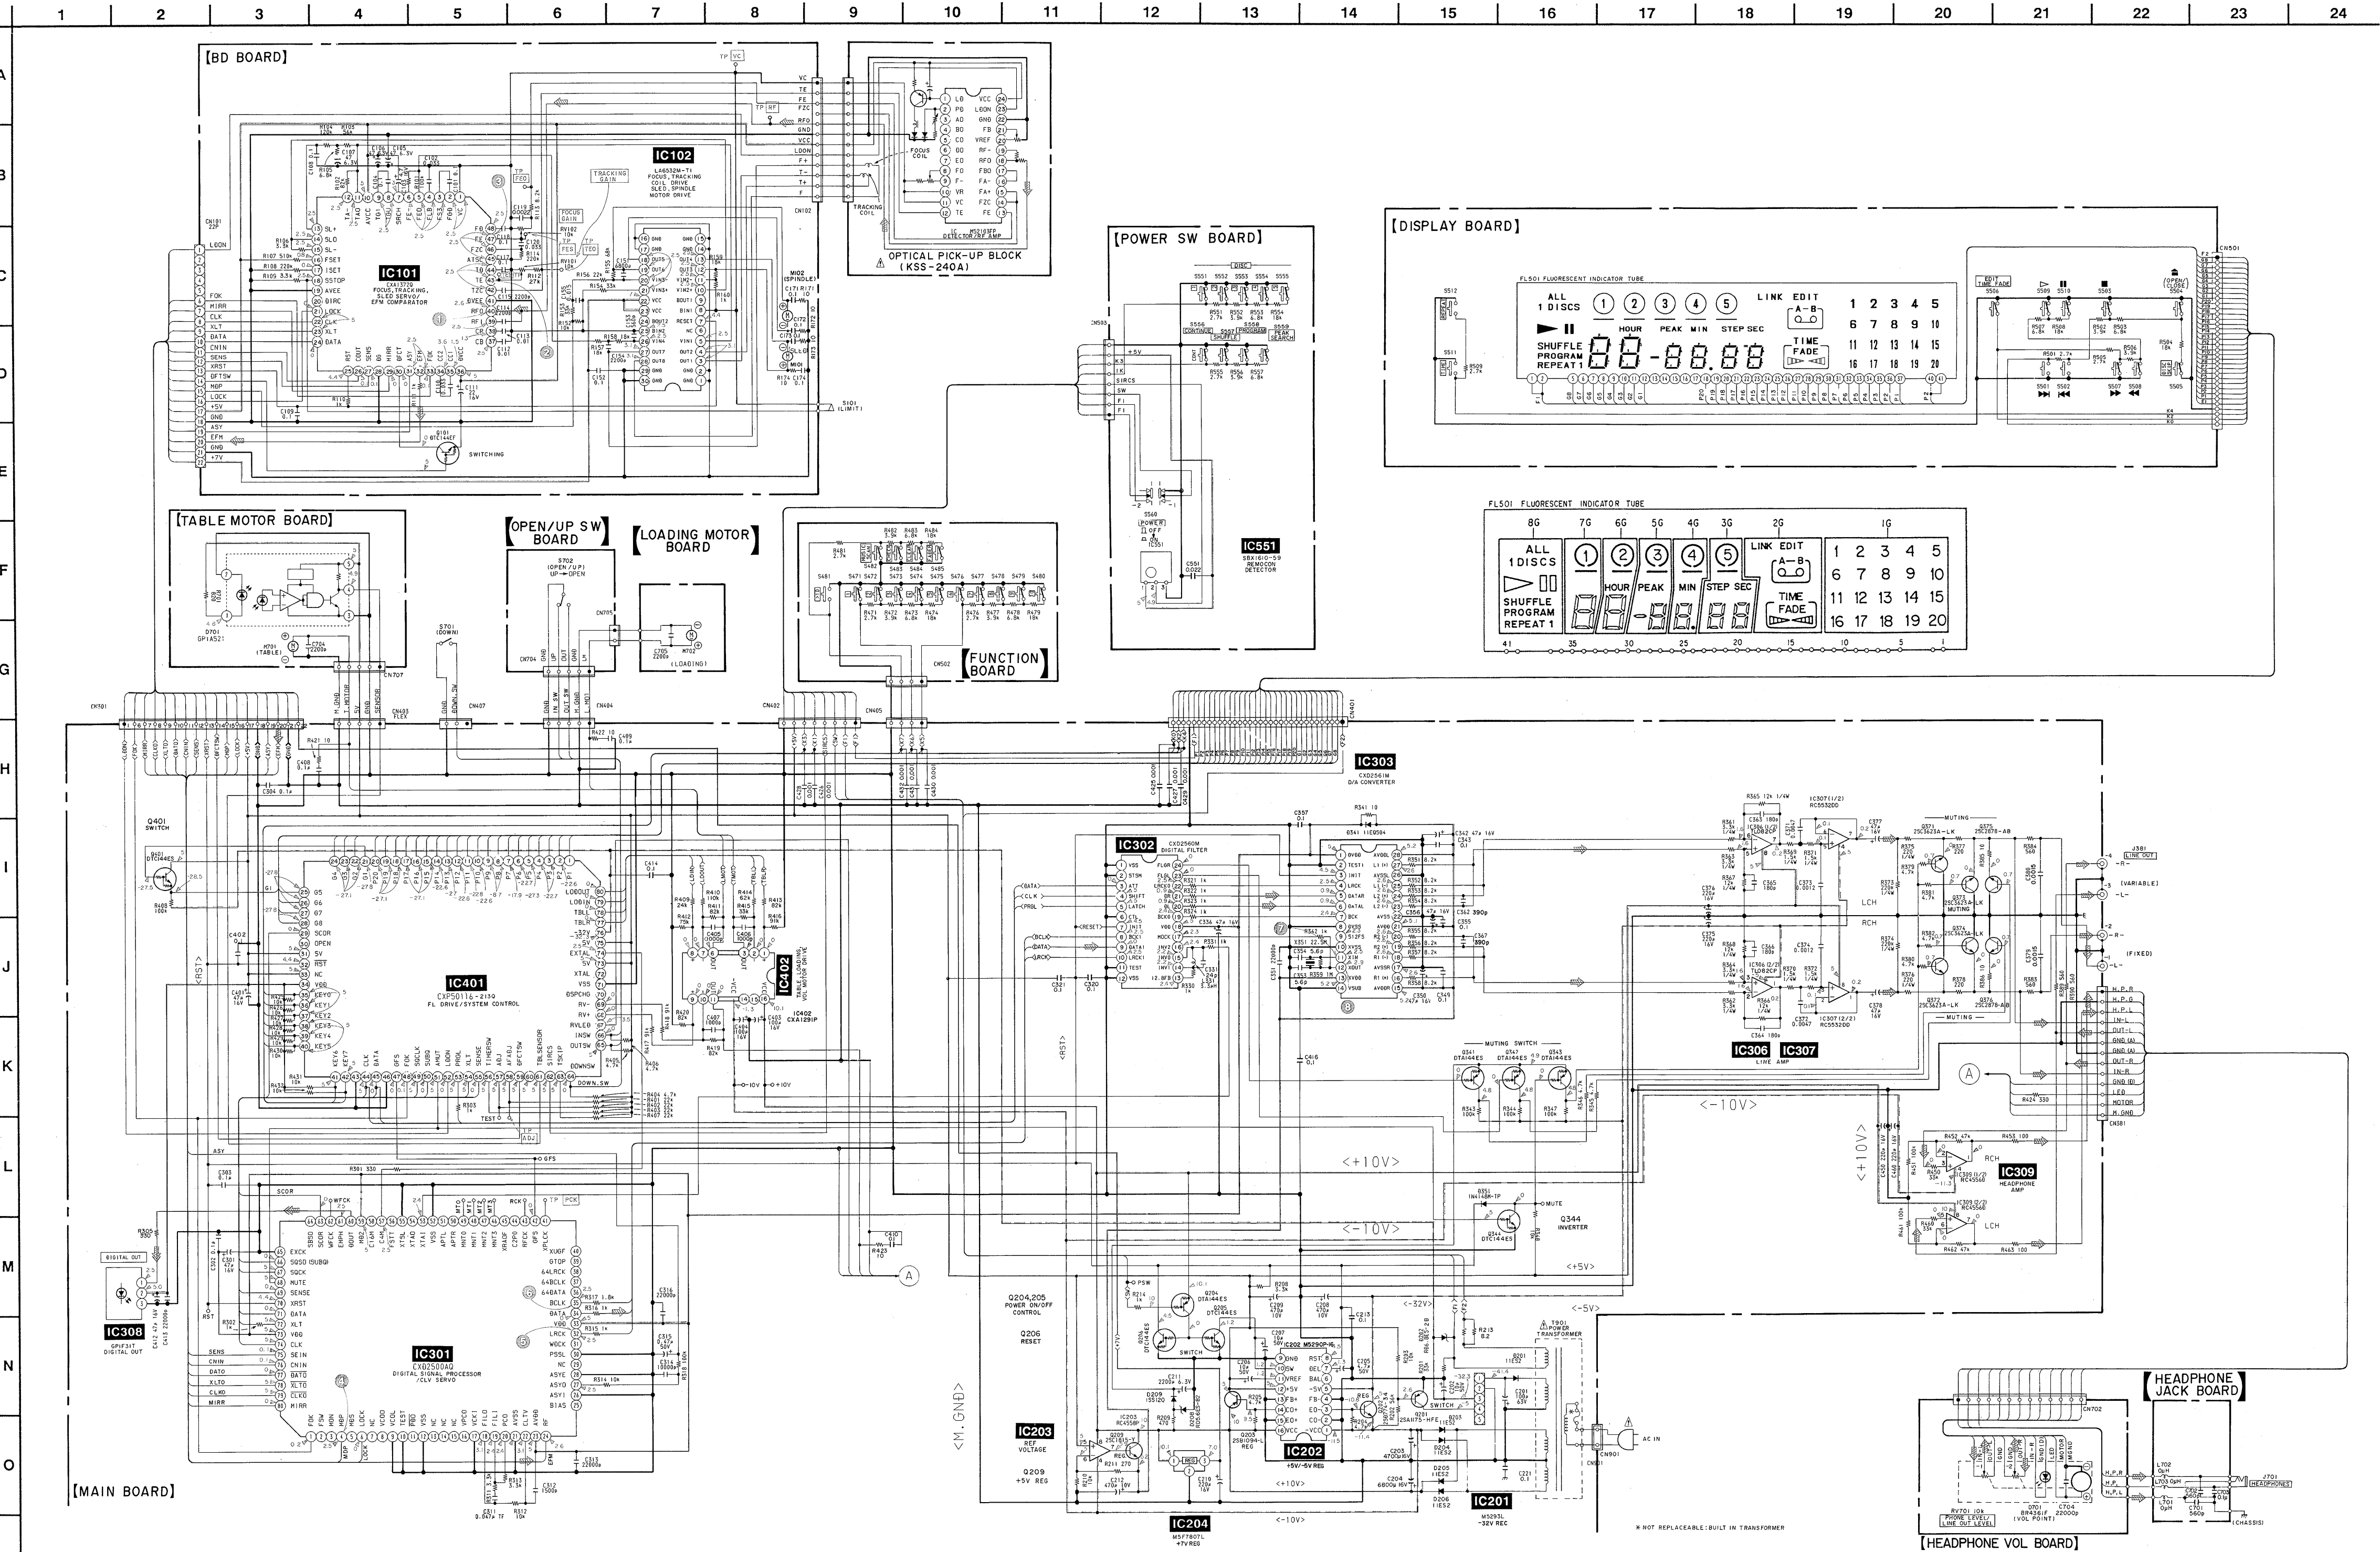


- Note:**
- All capacitors are in μF unless otherwise noted, pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{2}\text{W}$ or less unless otherwise specified.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Δ : B+ Line
- Δ : B- Line
- Δ : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages are taken with a VOM (Input Impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope.
- Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.

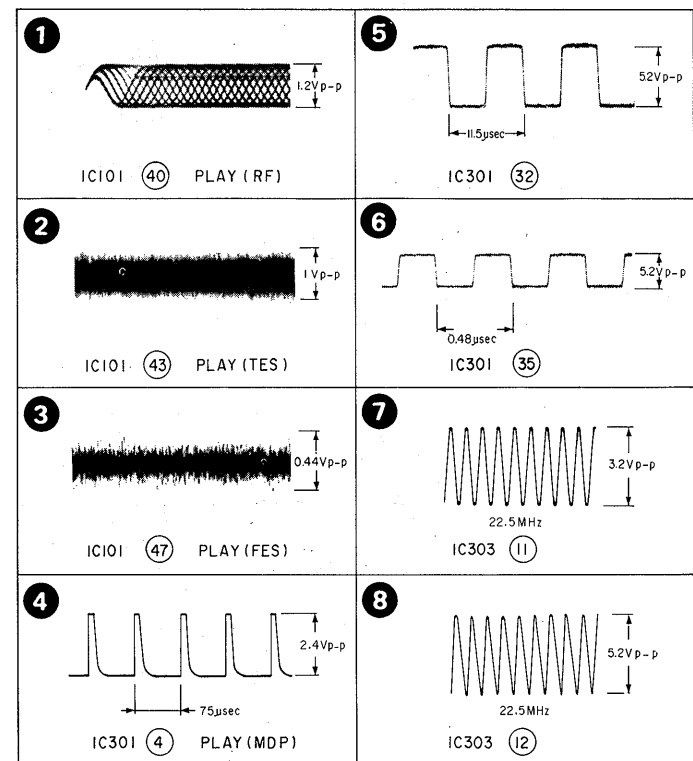

SECTION 5

EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


5-1. FRONT PANEL AND CASE ASSEMBLIES

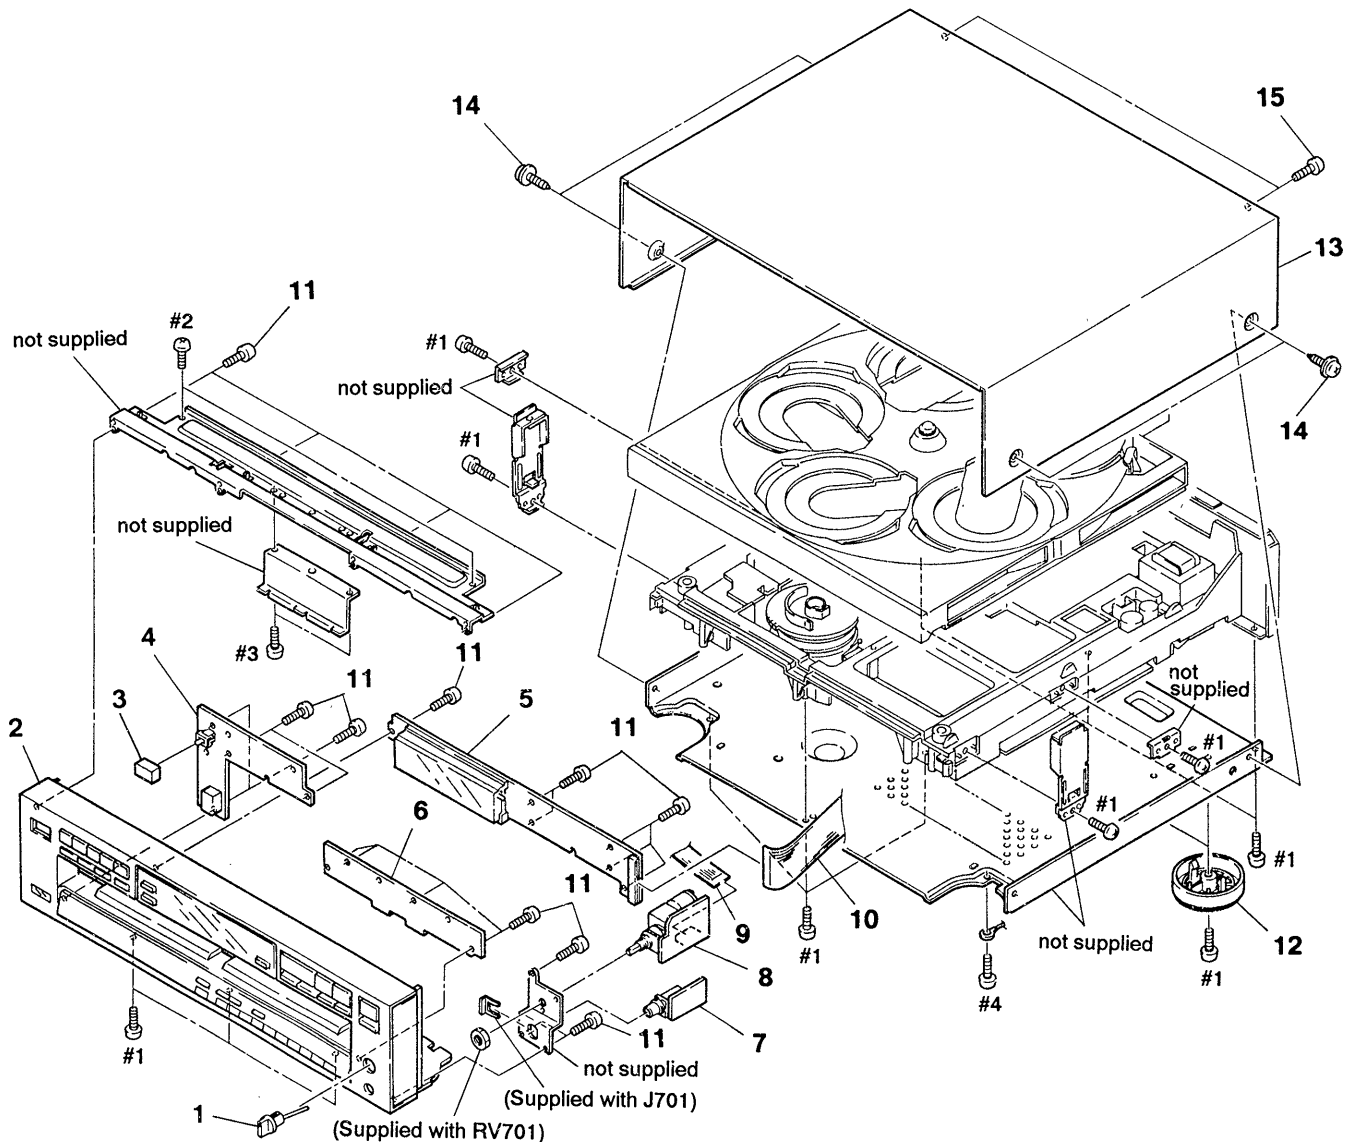

Ref. No.	Part No.	Description	Remark
1	A-4675-298-A	KNOB (HP) ASSY	
2	X-4941-483-1	PANEL ASSY, FRONT	
3	4-922-921-01	BUTTON (POWER)	
4	* 1-638-891-11	POWER SW BOARD	
5	* 1-638-890-11	DISPLAY BOARD	
6	* 1-638-892-11	FUNCTION BOARD	
7	* 1-638-895-11	HEADPHONE JACK BOARD	
8	* 1-638-894-11	HEADPHONE VOLUME BOARD	

Ref. No.	Part No.	Description	Remark
9	1-590-834-11	WIRE, FLAT TYPE (13 CORE)	
10	1-590-835-11	WIRE, FLAT TYPE (34 CORE)	
11	4-928-635-01	SCREW, +BV (2.6X8) TAPPING	
12	X-4924-464-1	FOOT ASSY	
13	* 4-944-153-01	CASE	
14	3-704-366-01	SCREW (CASE) (M3X8)	
15	3-703-685-21	SCREW (+BV 3X8)	


5-2. DISC TRAY ASSEMBLY

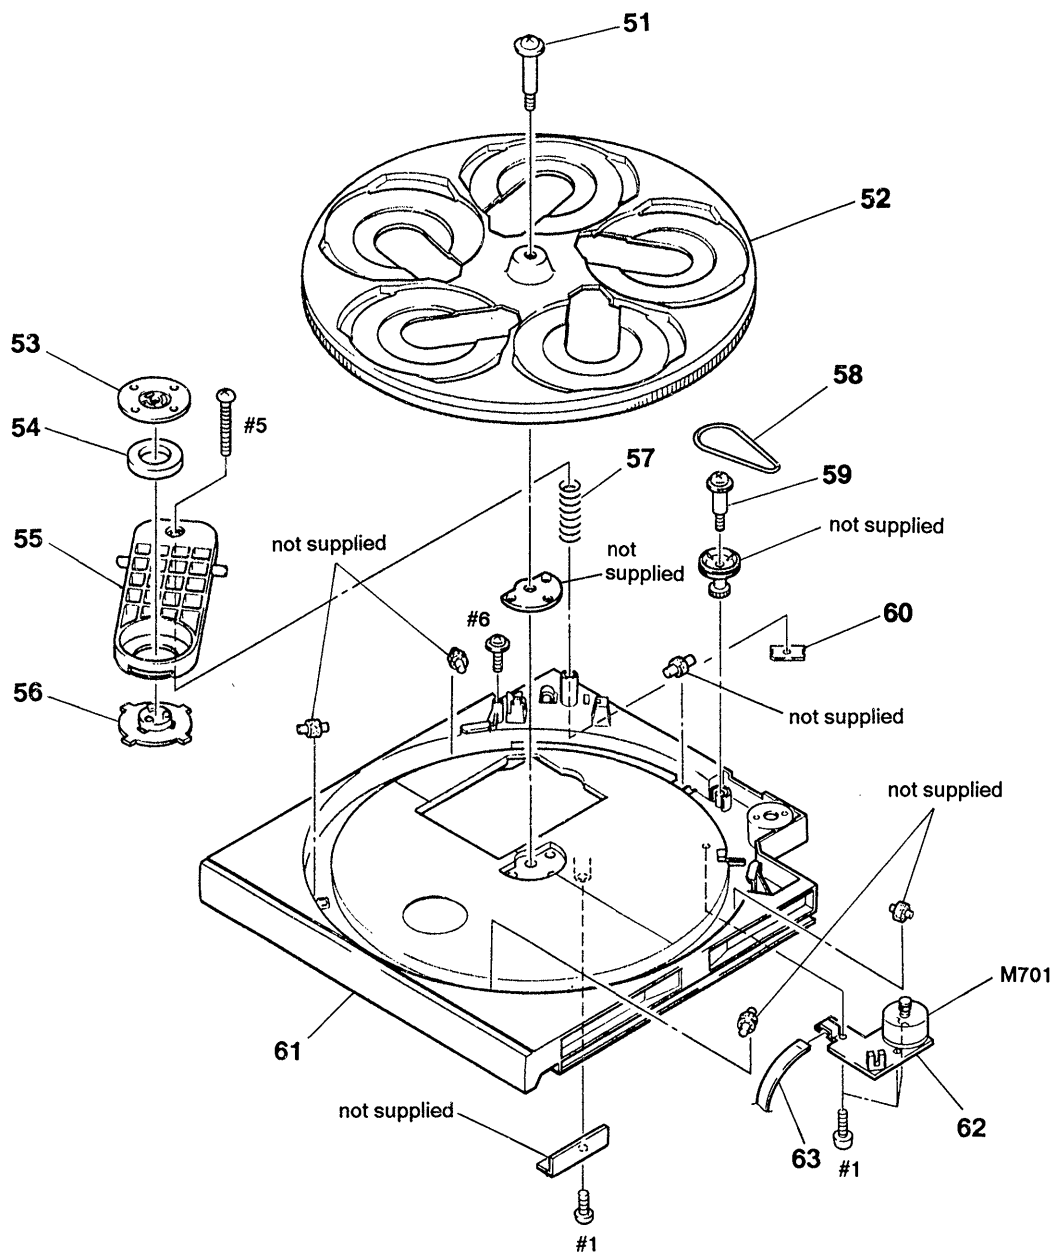

Ref. No.	Part No.	Description	Remark
51	4-926-384-01	SCREW, STEP	
52	* 4-926-383-01	TABLE (B), DISK	
53	4-921-029-01	YOKE, CHUCKING	
54	1-452-340-21	MAGNET	
55	* 4-930-506-02	BRACKET (PRESS PULLEY)	
56	4-921-022-01	PULLEY, CHUCKING	
57	4-926-395-01	SPRING, COMPRESSION	

Ref. No.	Part No.	Description	Remark
58	4-926-399-01	BELT	
59	4-923-597-01	SCREW, STEP	
60	* 4-926-388-01	BRACKET (ADJUSTMENT)	
61	4-944-160-01	TABLE (A), DISC	
62	* 1-638-729-11	TABLE MOTOR BOARD	
63	1-590-849-11	WIRE, FLAT TYPE (5 CORE)	
M701	A-4604-585-A	MOTOR ASSY, ROTARY (TABLE)	

5-3. CHASSIS ASSEMBLY

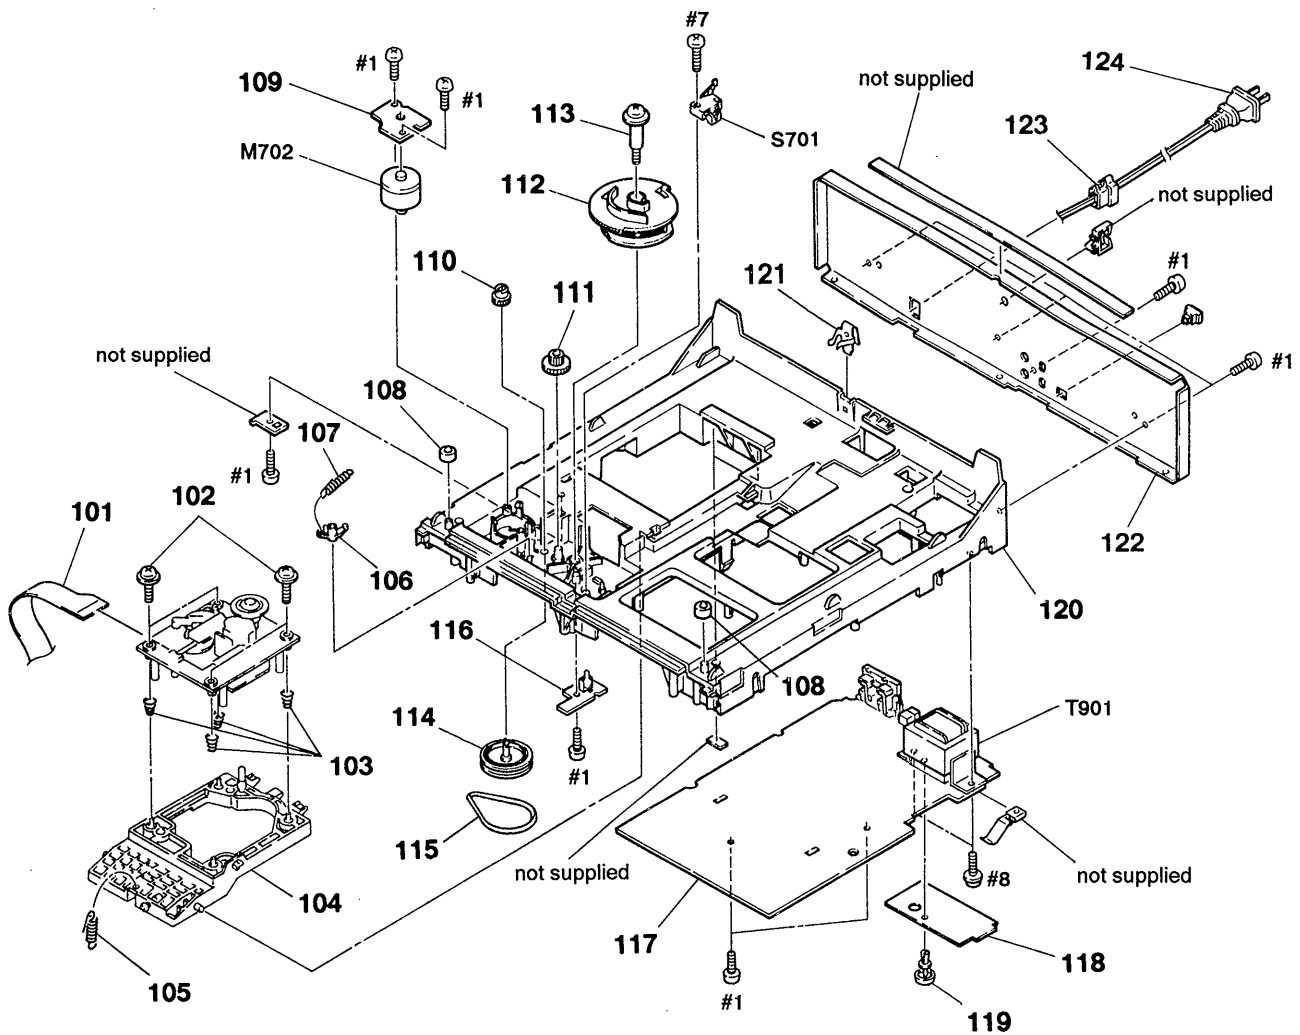


Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
101	1-535-892-11	JUMPER, FILM (WITH TERMINAL)	
102	4-933-134-01	SCREW (+PTPWH M2. 6X6)	
103	4-917-541-01	SPRING (B)	
104	* 4-934-373-01	BRACKET (BU)	
105	4-937-911-01	SPRING, TENSION	
106	4-917-519-01	LEVER, SET	
107	4-924-412-01	SPRING (B), TENSION	
108	* 4-934-382-01	CUSHION	
109	* 1-638-730-11	LOADING MOTOR BOARD	
110	4-934-375-01	GEAR (LOADING B)	
111	4-934-381-01	GEAR (LOADING C)	
112	4-934-391-01	GEAR (LOADING A)	
113	4-926-317-01	SCREW, STEP	

Ref. No.	Part No.	Description	Remark
114	X-4941-529-1	PULLEY ASSY	
115	4-944-490-01	BELT (TIMING)	
116	* 1-638-731-11	OPEN/UP SW BOARD	
117	* A-4617-818-A	MAIN BOARD, COMPLETE	
118	* 4-944-178-01	SHEET (INSULATING)	
119	3-531-576-11	RIVET	
120	* 4-943-997-01	CHASSIS	
121	* 4-943-996-01	SPRING, LEAF	
122	* 4-943-680-11	PANEL, BACK (Canadian)	
122	* 4-943-680-01	PANEL, BACK (US)	
123	* 3-703-244-00	BUSHING (2194), CORD	
124	 1-590-836-11	CORD, POWER	
M702	A-4604-834-A	MOTOR ASSY, LOADING	
S701	1-572-713-11	SWITCH, PUSH (WITH CONNECTOR) (DOWN)	
T901	 1-449-954-11	TRANSFORMER, POWER	

5-4. OPTICAL PICK-UP BLOCK ASSEMBLY (BU-5BD3)

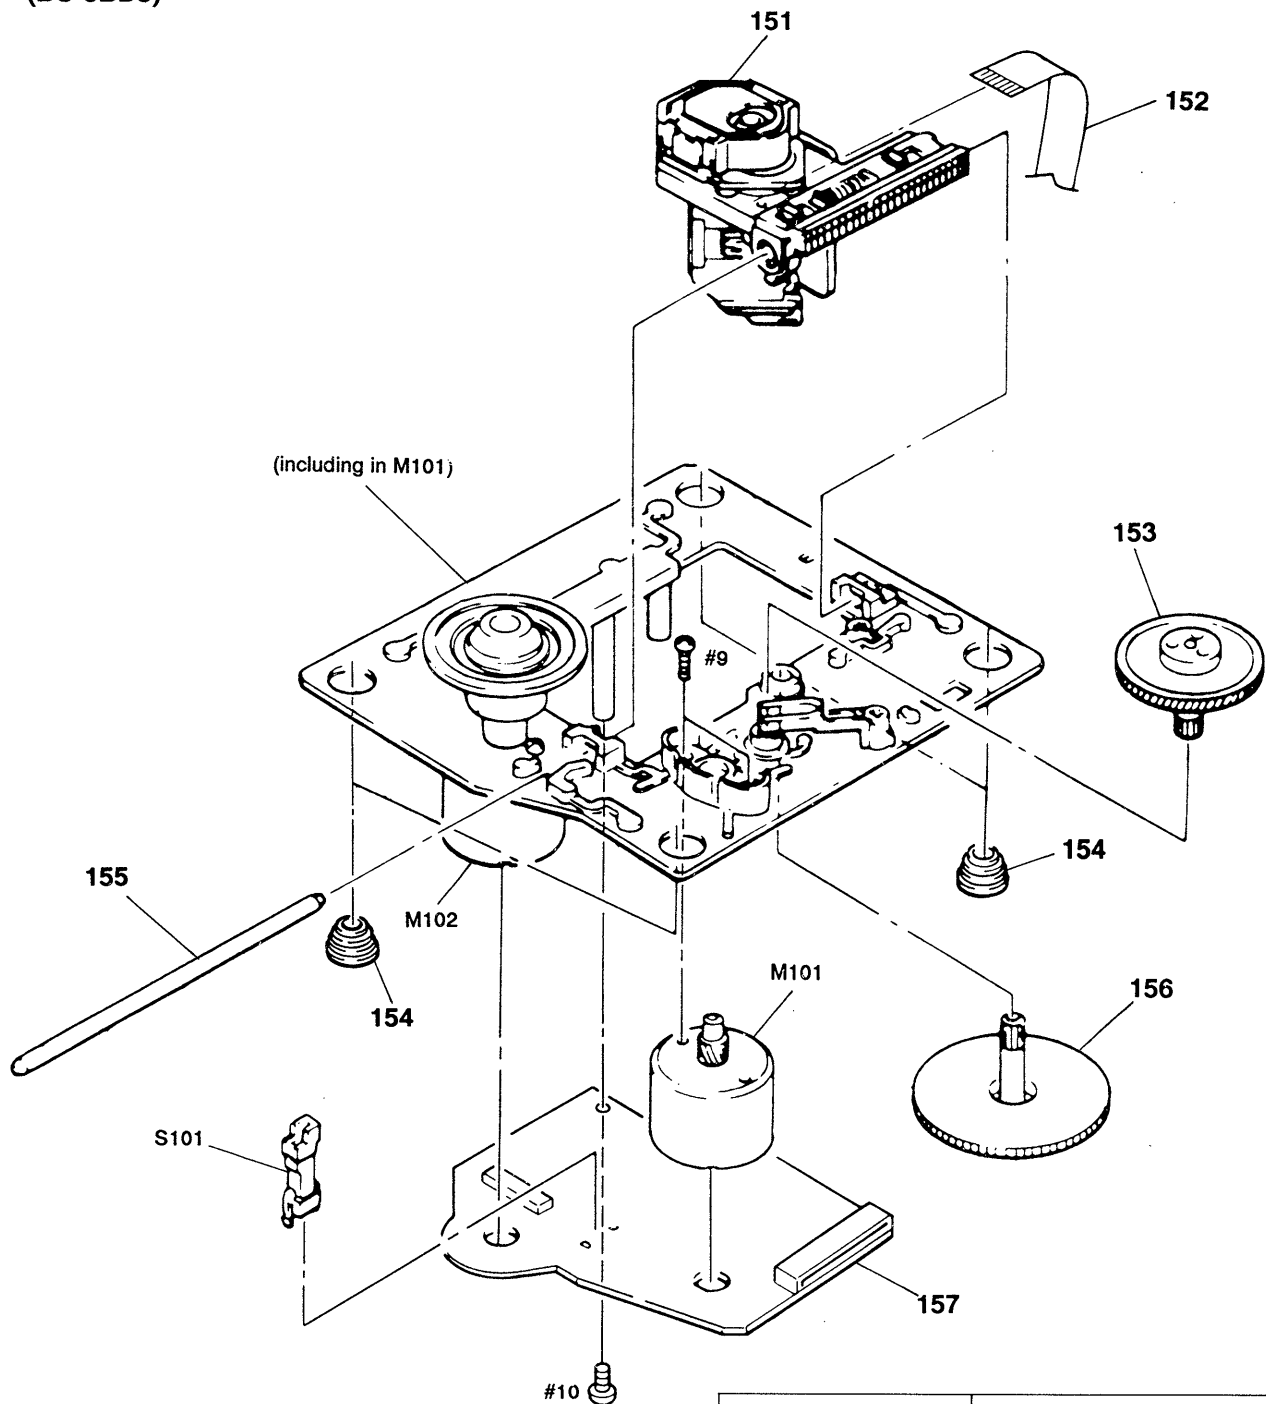

Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
151		8-848-144-11 DEVICE, OPTICAL KSS-240A	
152		1-575-001-11 WIRE, FLAT TYPE (12 CORE)	
153		4-917-567-01 GEAR (M)	
154		4-933-126-01 INSULATOR (A)	
155		4-917-565-01 SHAFT, SLED	

Ref. No.	Part No.	Description	Remark
156		4-917-564-01 GEAR (P), FLATNESS	
157	*	A-4617-371-A BD BOARD, COMPLETE	
M101		X-4917-504-1 MOTOR ASSY (SLED)	
M102		X-4917-523-3 MOTOR ASSY (SPINDLE)	
S101		1-572-085-11 SWITCH, LEAF (LIMIT IN)	

SECTION 6

ELECTRICAL PARTS LIST

BD

NOTE:

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	* A-4617-371-A	BD BOARD, COMPLETE				< CONNECTOR >	

		< CAPACITOR >					
C101	1-163-038-00	CERAMIC CHIP	0.1uF 25V	CN101	1-568-796-11	SOCKET, CONNECTOR 22P	
C102	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V	CN102	1-568-795-11	SOCKET, CONNECTOR 12P	
C103	1-126-163-11	ELECT	4.7uF 20% 50V			< IC >	
C104	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC101	8-752-050-82	IC CXA1372Q	
C105	1-126-154-11	ELECT	47uF 20% 6.3V	IC102	8-759-822-36	IC LA6532M	
						< JACK >	
C106	1-126-154-11	ELECT	47uF 20% 6.3V	J101	1-216-295-00	METAL CHIP 0 5% 1/10W	
C107	1-126-154-11	ELECT	47uF 20% 6.3V	J102	1-216-295-00	METAL CHIP 0 5% 1/10W	
C108	1-163-038-00	CERAMIC CHIP	0.1uF 25V			< TRANSISTOR >	
C109	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C110	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V	Q101	8-729-901-01	TRANSISTOR DTC144EK	
						< RESISTOR >	
C111	1-131-367-00	TANTALUM	22uF 10% 20V	R101	1-216-097-00	METAL CHIP 100K 5% 1/10W	
C112	1-164-232-11	CERAMIC CHIP	0.01uF 50V	R102	1-216-095-00	METAL CHIP 82K 5% 1/10W	
C113	1-164-232-11	CERAMIC CHIP	0.01uF 50V	R103	1-216-091-00	METAL CHIP 56K 5% 1/10W	
C114	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	R104	1-216-099-00	METAL CHIP 120K 5% 1/10W	
C115	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	R105	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
				R106	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
C117	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R107	1-216-114-00	METAL GLAZE 510K 5% 1/10W	
C118	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R108	1-216-105-00	METAL CHIP 220K 5% 1/10W	
C119	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	R109	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
C120	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V	R110	1-216-049-00	METAL CHIP 1K 5% 1/10W	
C151	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V				
				R111	1-216-049-00	METAL CHIP 1K 5% 1/10W	
C152	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R112	1-216-083-00	METAL CHIP 27K 5% 1/10W	
C153	1-163-006-11	CERAMIC CHIP	560PF 10% 50V	R113	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
C154	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	R114	1-216-105-00	METAL CHIP 220K 5% 1/10W	
C155	1-163-023-00	CERAMIC CHIP	0.015uF 5% 50V	R152	1-216-073-00	METAL CHIP 10K 5% 1/10W	
C171	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C172	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C173	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C174	1-163-038-00	CERAMIC CHIP	0.1uF 25V				

BD	HEADPHONE VOLUME	HEADPHONE JACK	MAIN
----	------------------	----------------	------

DISPLAY	POWER SW	FUNCTION
---------	----------	----------

Ref. No.	Part No.	Description	Remark
R153	1-216-085-00	METAL CHIP 33K	5% 1/10W
R154	1-216-085-00	METAL CHIP 33K	5% 1/10W
R155	1-216-093-00	METAL CHIP 68K	5% 1/10W
R156	1-216-081-00	METAL CHIP 22K	5% 1/10W
R157	1-216-079-00	METAL CHIP 18K	5% 1/10W
R158	1-216-079-00	METAL CHIP 18K	5% 1/10W
R159	1-216-079-00	METAL CHIP 18K	5% 1/10W
R160	1-216-049-00	METAL CHIP 1K	5% 1/10W
R171	1-216-001-00	METAL CHIP 10	5% 1/10W
R172	1-216-001-00	METAL CHIP 10	5% 1/10W
R173	1-216-001-00	METAL CHIP 10	5% 1/10W
R174	1-216-001-00	METAL CHIP 10	5% 1/10W

< VARIABLE RESISTOR >

RV101	1-238-016-11	RES. ADJ. CARBON 10K
RV102	1-238-016-11	RES. ADJ. CARBON 10K

< SWITCH >

S101	1-572-085-11	SWITCH, LEAF (LIMIT)
------	--------------	----------------------

- * 1-638-894-11 HEADPHONE VOLUME BOARD

- * 1-638-895-11 HEADPHONE JACK BOARD

- * 4-922-980-01 HOLDER (LED)

< CAPACITOR >

C701	1-162-291-31	CERAMIC 560PF	10% 50V
C702	1-162-291-31	CERAMIC 560PF	10% 50V
C703	1-164-159-11	CERAMIC 0.1uF	50V
C704	1-161-494-00	CERAMIC 0.022uF	25V

< CONNECTOR >

CN702	* 1-5468-832-11	SOCKET, CONNECTOR 13P
-------	-----------------	-----------------------

< DIODE >

D701	8-719-970-49	DIODE BR4361F (VOL POINT)
------	--------------	---------------------------

< JACK >

J701	1-568-519-21	JACK, LARGE TYPE (HEADPHONES)
------	--------------	-------------------------------

< COIL >

L701	1-412-473-21	INDUCTOR 0uH
L702	1-412-473-21	INDUCTOR 0uH
L703	1-412-473-21	INDUCTOR 0uH

Ref. No.	Part No.	Description	Remark
		< VARIABLE RESISTOR >	
RV701	1-238-750-11	RES. VAR. CARBON 10K/10K (PHONE/LINE OUT LEVEL)	

- * A-4617-818-A MAIN BOARD, COMPLETE

- * 1-638-890-11 DISPLAY BOARD

- * 1-638-891-11 POWER SW BOARD

- * 1-638-892-11 FUNCTION BOARD

- * 4-875-327-01 HEAT SINK
- 7-682-547-04 SCREW +BVT 3X6 (S)

< CAPACITOR >

C201	1-124-572-11	ELECT 100uF	20%	63V
C202	1-126-059-11	ELECT 10uF	20%	50V
C203	1-126-937-11	ELECT 4700uF	20%	16V
C204	1-126-017-11	ELECT 6800uF	20%	16V
C205	1-126-163-11	ELECT 4.7uF	20%	50V
C206	1-126-059-11	ELECT 10uF	20%	50V
C207	1-126-059-11	ELECT 10uF	20%	50V
C208	1-124-997-11	ELECT 470uF	20%	10V
C209	1-124-997-11	ELECT 470uF	20%	10V
C210	1-126-024-11	ELECT 220uF	20%	16V
C211	1-124-893-11	ELECT 2200uF	20%	10V
C212	1-124-997-11	ELECT 470uF	20%	10V
C213	1-164-159-11	CERAMIC 0.1uF		50V
C221	1-164-159-11	CERAMIC 0.1uF		50V
C301	1-126-022-11	ELECT 47uF	20%	16V
C302	1-164-159-11	CERAMIC 0.1uF		50V
C303	1-164-159-11	CERAMIC 0.1uF		50V
C304	1-164-159-11	CERAMIC 0.1uF		50V
C311	1-136-161-00	FILM 0.047uF	5%	50V
C312	1-161-374-11	CERAMIC 0.0015uF	20%	50V
C313	1-161-494-00	CERAMIC 0.022uF		25V
C314	1-162-306-11	CERAMIC 0.01uF	20%	16V
C315	1-126-300-11	ELECT 0.47uF	20%	50V
C316	1-161-494-00	CERAMIC 0.022uF		25V
C320	1-164-159-11	CERAMIC 0.1uF		50V
C321	1-164-159-11	CERAMIC 0.1uF		50V
C331	1-162-208-31	CERAMIC 24PF	5%	50V
C336	1-126-022-11	ELECT 47uF	20%	16V
C342	1-126-022-11	ELECT 47uF	20%	16V
C343	1-164-159-11	CERAMIC 0.1uF		50V

MAIN

DISPLAY

POWER SW

FUNCTION

Ref. No.	Part No.	Description	Remark
C349	1-164-159-11	CERAMIC 0.1uF	50V
C350	1-126-022-11	ELECT 47uF	20% 16V
C351	1-161-494-00	CERAMIC 0.022uF	25V
C353	1-162-196-31	CERAMIC 5.6PF	10% 50V
C354	1-162-196-31	CERAMIC 5.6PF	10% 50V
C355	1-164-159-11	CERAMIC 0.1uF	50V
C356	1-126-022-11	ELECT 47uF	20% 16V
C357	1-161-772-11	CERAMIC 0.1uF	10% 25V
C362	1-162-289-31	CERAMIC 390PF	10% 50V
C363	1-162-285-31	CERAMIC 180PF	10% 50V
C364	1-162-285-31	CERAMIC 180PF	10% 50V
C365	1-162-285-31	CERAMIC 180PF	10% 50V
C366	1-162-285-31	CERAMIC 180PF	10% 50V
C367	1-162-289-31	CERAMIC 390PF	10% 50V
C371	1-130-479-00	MYLAR 0.0047uF	5% 50V
C372	1-130-479-00	MYLAR 0.0047uF	5% 50V
C373	1-130-472-00	MYLAR 0.0012uF	5% 50V
C374	1-130-472-00	MYLAR 0.0012uF	5% 50V
C375	1-126-024-11	ELECT 220uF	20% 16V
C376	1-126-024-11	ELECT 220uF	20% 16V
C377	1-126-022-11	ELECT 47uF	20% 16V
C378	1-126-022-11	ELECT 47uF	20% 16V
C379	1-130-473-00	MYLAR 0.0015uF	5% 50V
C380	1-130-473-00	MYLAR 0.0015uF	5% 50V
C401	1-126-022-11	ELECT 47uF	20% 16V
C402	1-164-159-11	CERAMIC 0.1uF	50V
C403	1-126-023-11	ELECT 100uF	20% 16V
C404	1-126-023-11	ELECT 100uF	20% 16V
C405	1-162-294-31	CERAMIC 0.001uF	10% 50V
C406	1-162-294-31	CERAMIC 0.001uF	10% 50V
C407	1-162-294-31	CERAMIC 0.001uF	10% 50V
C408	1-164-159-11	CERAMIC 0.1uF	50V
C409	1-164-159-11	CERAMIC 0.1uF	50V
C410	1-164-159-11	CERAMIC 0.1uF	50V
C412	1-126-022-11	ELECT 47uF	20% 16V
C413	1-161-494-00	CERAMIC 0.022uF	25V
C414	1-164-159-11	CERAMIC 0.1uF	50V
C416	1-164-159-11	CERAMIC 0.1uF	50V
C425	1-162-294-31	CERAMIC 0.001uF	10% 50V
C426	1-162-294-31	CERAMIC 0.001uF	10% 50V
C427	1-162-294-31	CERAMIC 0.001uF	10% 50V
C428	1-162-294-31	CERAMIC 0.001uF	10% 50V
C429	1-162-294-31	CERAMIC 0.001uF	10% 50V
C430	1-162-294-31	CERAMIC 0.001uF	10% 50V
C431	1-162-294-31	CERAMIC 0.001uF	10% 50V
C432	1-162-294-31	CERAMIC 0.001uF	10% 50V
C450	1-126-024-11	ELECT 220uF	20% 16V
C460	1-126-024-11	ELECT 220uF	20% 16V
C551	1-161-494-00	CERAMIC 0.022uF	25V

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN301	* 1-573-046-11	SOCKET, CONNECTOR 18P	
CN381	* 1-568-856-11	SOCKET, CONNECTOR 13P	
CN401	* 1-573-080-11	SOCKET, CONNECTOR (34P, L TYPE)	
CN402	* 1-568-946-11	PIN, CONNECTOR 8P	
CN403	* 1-568-824-11	SOCKET, CONNECTOR 5P	
CN404	* 1-568-943-11	PIN, CONNECTOR 5P	
CN405	* 1-568-942-11	PIN, CONNECTOR 4P	
CN501	* 1-573-080-11	SOCKET, CONNECTOR (34P, L TYPE)	
CN901	* 1-573-047-11	PIN, CONNECTOR	
< DIODE >			
D201	8-719-200-82	DIODE 11ES2	
D202	8-719-109-97	DIODE RD6.8ES-2B	
D203	8-719-200-82	DIODE 11ES2	
D204	8-719-200-82	DIODE 11ES2	
D205	8-719-200-82	DIODE 11ES2	
D206	8-719-200-82	DIODE 11ES2	
D208	8-719-109-89	DIODE RD5.6ES-82	
D209	8-719-912-20	DIODE 1SS120	
D341	8-719-210-21	DIODE 11EQS04	
D351	8-719-912-20	DIODE 1SS120	
FL501	1-519-655-11	FLUORESCENT INDICATOR	
< IC >			
IC201	8-759-633-42	IC M5293L	
IC202	8-759-630-21	IC M5290P-16	
IC203	8-759-945-58	IC RC4558P	
IC204	8-759-604-86	IC M5F7807L	
IC301	8-752-337-26	IC CXD2500AQ	
IC302	8-752-342-65	IC CXD2560M	
IC303	8-752-343-01	IC CXD2561M	
IC306	8-759-990-82	IC TL082CP	
IC307	8-759-982-03	IC RC5532DD	
IC308	8-759-977-71	IC GPIF31T	
IC309	8-759-981-85	IC RC4556D	
IC401	8-752-817-42	IC CXP50116-213Q	
IC402	8-759-821-32	IC CXA-1291P	
IC551	8-741-100-48	IC SBX1610-59	
< JACK >			
J381	* 1-569-443-11	JACK, PIN 4P (LINE OUT VARIABLE/FIXED)	
< COIL >			
L331	1-408-403-00	INDUCTOR 3.3uH	

MAIN

DISPLAY

POWER SW

FUNCTION

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< TRANSISTOR >				R322	1-249-417-11	CARBON	1K 5% 1/4W
Q201	8-729-119-76	TRANSISTOR 2SA1175-HFE		R323	1-249-417-11	CARBON	1K 5% 1/4W
Q202	8-729-140-96	TRANSISTOR 2SD774-34		R324	1-249-417-11	CARBON	1K 5% 1/4W
Q203	8-729-111-67	TRANSISTOR 2SB1094-L		R330	1-249-417-11	CARBON	1K 5% 1/4W
Q204	8-729-900-65	TRANSISTOR DTA144ES		R331	1-249-417-11	CARBON	1K 5% 1/4W
Q205	8-729-900-89	TRANSISTOR DTC144ES		R341	1-249-393-11	CARBON	10 5% 1/4W
Q206	8-729-900-89	TRANSISTOR DTC144ES		R342	1-249-417-11	CARBON	1K 5% 1/4W
Q209	8-729-281-52	TRANSISTOR 2SC1815-Y		R343	1-249-441-11	CARBON	100K 5% 1/4W
Q341	8-729-900-65	TRANSISTOR DTA144ES		R344	1-249-441-11	CARBON	100K 5% 1/4W
Q342	8-729-900-65	TRANSISTOR DTA144ES		R345	1-249-425-11	CARBON	4.7K 5% 1/4W
Q343	8-729-900-65	TRANSISTOR DTA144ES		R346	1-249-425-11	CARBON	4.7K 5% 1/4W
Q344	8-729-900-89	TRANSISTOR DTC144ES		R347	1-249-441-11	CARBON	100K 5% 1/4W
Q371	8-729-141-30	TRANSISTOR 2SC3623A-LK		R348	1-249-429-11	CARBON	10K 5% 1/4W
Q372	8-729-141-30	TRANSISTOR 2SC3623A-LK		R351	1-249-428-11	CARBON	8.2K 5% 1/4W
Q373	8-729-141-30	TRANSISTOR 2SC3623A-LK		R352	1-249-428-11	CARBON	8.2K 5% 1/4W
Q374	8-729-141-30	TRANSISTOR 2SC3623A-LK		R353	1-249-428-11	CARBON	8.2K 5% 1/4W
Q375	8-729-231-55	TRANSISTOR 2SC2878-AB		R354	1-249-428-11	CARBON	8.2K 5% 1/4W
Q376	8-729-231-55	TRANSISTOR 2SC2878-AB		R355	1-249-428-11	CARBON	8.2K 5% 1/4W
Q401	8-729-900-89	TRANSISTOR DTC144ES		R356	1-249-428-11	CARBON	8.2K 5% 1/4W
				R357	1-249-428-11	CARBON	8.2K 5% 1/4W
< RESISTOR >				R358	1-249-428-11	CARBON	8.2K 5% 1/4W
R201	1-249-435-11	CARBON	33K 5% 1/4W	R359	1-247-903-00	CARBON	1M 5% 1/4W
R202	1-249-438-11	CARBON	56K 5% 1/4W	R361	1-249-423-11	CARBON	3.3K 5% 1/4W
R203	1-249-429-11	CARBON	10K 5% 1/4W	R362	1-249-423-11	CARBON	3.3K 5% 1/4W
R204	1-249-425-11	CARBON	4.7K 5% 1/4W	R363	1-249-423-11	CARBON	3.3K 5% 1/4W
R205	1-249-425-11	CARBON	4.7K 5% 1/4W	R364	1-249-423-11	CARBON	3.3K 5% 1/4W
R208	1-249-423-11	CARBON	3.3K 5% 1/4W	R365	1-249-430-11	CARBON	12K 5% 1/4W
R209	1-249-413-11	CARBON	470 5% 1/4W	R366	1-249-430-11	CARBON	12K 5% 1/4W
R210	1-249-429-11	CARBON	10K 5% 1/4W	R367	1-249-430-11	CARBON	12K 5% 1/4W
R211	1-249-410-11	CARBON	270 5% 1/4W	R368	1-249-430-11	CARBON	12K 5% 1/4W
R212	1-249-392-11	CARBON	8.2 5% 1/4W	R369	1-249-419-11	CARBON	1.5K 5% 1/4W
R213	1-249-392-11	CARBON	8.2 5% 1/4W	R370	1-249-419-11	CARBON	1.5K 5% 1/4W
R214	1-249-417-11	CARBON	1K 5% 1/4W	R371	1-249-419-11	CARBON	1.5K 5% 1/4W
R301	1-249-411-11	CARBON	330 5% 1/4W	R372	1-249-419-11	CARBON	1.5K 5% 1/4W
R302	1-249-417-11	CARBON	1K 5% 1/4W	R373	1-247-887-00	CARBON	220K 5% 1/4W
R303	1-249-417-11	CARBON	1K 5% 1/4W	R374	1-247-887-00	CARBON	220K 5% 1/4W
R305	1-249-411-11	CARBON	330 5% 1/4W	R375	1-249-409-11	CARBON	220 5% 1/4W
R311	1-249-423-11	CARBON	3.3K 5% 1/4W	R376	1-249-409-11	CARBON	220 5% 1/4W
R312	1-249-429-11	CARBON	10K 5% 1/4W	R377	1-249-409-11	CARBON	220 5% 1/4W
R313	1-249-423-11	CARBON	3.3K 5% 1/4W	R378	1-249-409-11	CARBON	220 5% 1/4W
R314	1-249-429-11	CARBON	10K 5% 1/4W	R379	1-249-425-11	CARBON	4.7K 5% 1/4W
R315	1-249-417-11	CARBON	1K 5% 1/4W	R380	1-249-425-11	CARBON	4.7K 5% 1/4W
R316	1-249-417-11	CARBON	1K 5% 1/4W	R381	1-249-425-11	CARBON	4.7K 5% 1/4W
R317	1-249-420-11	CARBON	1.8K 5% 1/4W	R382	1-249-425-11	CARBON	4.7K 5% 1/4W
R318	1-249-441-11	CARBON	100K 5% 1/4W	R383	1-249-414-11	CARBON	560 5% 1/4W
R321	1-249-417-11	CARBON	1K 5% 1/4W	R384	1-249-414-11	CARBON	560 5% 1/4W
				R385	1-249-393-11	CARBON	10 5% 1/4W
				R386	1-249-393-11	CARBON	10 5% 1/4W
				R389	1-249-414-11	CARBON	560 5% 1/4W

MAIN

DISPLAY

POWER SW

FUNCTION

Ref. No.	Part No.	Description	Remark
R390	1-249-414-11	CARBON	560 5% 1/4W
R401	1-249-433-11	CARBON	22K 5% 1/4W
R402	1-249-433-11	CARBON	22K 5% 1/4W
R403	1-249-433-11	CARBON	22K 5% 1/4W
R404	1-249-425-11	CARBON	4. 7K 5% 1/4W
R405	1-249-425-11	CARBON	4. 7K 5% 1/4W
R406	1-249-425-11	CARBON	4. 7K 5% 1/4W
R407	1-249-433-11	CARBON	22K 5% 1/4W
R408	1-249-441-11	CARBON	100K 5% 1/4W
R409	1-247-864-11	CARBON	24K 5% 1/4W
R410	1-247-880-11	CARBON	110K 5% 1/4W
R411	1-249-440-11	CARBON	82K 5% 1/4W
R412	1-247-876-11	CARBON	75K 5% 1/4W
R413	1-249-440-11	CARBON	82K 5% 1/4W
R414	1-247-874-11	CARBON	62K 5% 1/4W
R415	1-249-435-11	CARBON	33K 5% 1/4W
R416	1-247-878-00	CARBON	91K 5% 1/4W
R417	1-247-878-00	CARBON	91K 5% 1/4W
R418	1-247-878-00	CARBON	91K 5% 1/4W
R419	1-249-440-11	CARBON	82K 5% 1/4W
R420	1-249-440-11	CARBON	82K 5% 1/4W
R421	1-249-393-11	CARBON	10 5% 1/4W
R422	1-249-393-11	CARBON	10 5% 1/4W
R423	1-249-393-11	CARBON	10 5% 1/4W
R424	1-249-411-11	CARBON	330 5% 1/4W
R425	1-249-429-11	CARBON	10K 5% 1/4W
R426	1-249-429-11	CARBON	10K 5% 1/4W
R427	1-249-429-11	CARBON	10K 5% 1/4W
R428	1-249-429-11	CARBON	10K 5% 1/4W
R429	1-249-429-11	CARBON	10K 5% 1/4W
R430	1-249-429-11	CARBON	10K 5% 1/4W
R431	1-249-429-11	CARBON	10K 5% 1/4W
R432	1-249-429-11	CARBON	10K 5% 1/4W
R450	1-249-435-11	CARBON	33K 5% 1/4W
R451	1-249-441-11	CARBON	100K 5% 1/4W
R452	1-249-437-11	CARBON	47K 5% 1/4W
R453	1-249-405-11	CARBON	100 5% 1/4W
R460	1-249-435-11	CARBON	33K 5% 1/4W
R461	1-249-441-11	CARBON	100K 5% 1/4W
R462	1-249-437-11	CARBON	47K 5% 1/4W
R463	1-249-405-11	CARBON	100 5% 1/4W
R471	1-249-422-11	CARBON	2. 7K 5% 1/4W
R472	1-249-424-11	CARBON	3. 9K 5% 1/4W
R473	1-249-427-11	CARBON	6. 8K 5% 1/4W
R474	1-249-432-11	CARBON	18K 5% 1/4W
R476	1-249-422-11	CARBON	2. 7K 5% 1/4W

Ref. No.	Part No.	Description	Remark
R477	1-249-424-11	CARBON	3. 9K 5% 1/4W
R478	1-249-427-11	CARBON	6. 8K 5% 1/4W
R479	1-249-432-11	CARBON	18K 5% 1/4W
R481	1-249-422-11	CARBON	2. 7K 5% 1/4W
R482	1-249-424-11	CARBON	3. 9K 5% 1/4W
R483	1-249-427-11	CARBON	6. 8K 5% 1/4W
R484	1-249-432-11	CARBON	18K 5% 1/4W
R501	1-249-422-11	CARBON	2. 7K 5% 1/4W
R502	1-249-424-11	CARBON	3. 9K 5% 1/4W
R503	1-249-427-11	CARBON	6. 8K 5% 1/4W
R504	1-249-432-11	CARBON	18K 5% 1/4W
R505	1-249-422-11	CARBON	2. 7K 5% 1/4W
R506	1-249-424-11	CARBON	3. 9K 5% 1/4W
R507	1-249-427-11	CARBON	6. 8K 5% 1/4W
R508	1-249-432-11	CARBON	18K 5% 1/4W
R509	1-249-422-11	CARBON	2. 7K 5% 1/4W
R551	1-249-422-11	CARBON	2. 7K 5% 1/4W
R552	1-249-424-11	CARBON	3. 9K 5% 1/4W
R553	1-249-427-11	CARBON	6. 8K 5% 1/4W
R554	1-249-432-11	CARBON	18K 5% 1/4W
R555	1-249-422-11	CARBON	2. 7K 5% 1/4W
R556	1-249-424-11	CARBON	3. 9K 5% 1/4W
R557	1-249-427-11	CARBON	6. 8K 5% 1/4W

< SWITCH >

S471	1-554-303-21	SWITCH, TACTILE (1)
S472	1-554-303-21	SWITCH, TACTILE (2)
S473	1-554-303-21	SWITCH, TACTILE (3)
S474	1-554-303-21	SWITCH, TACTILE (4)
S475	1-554-303-21	SWITCH, TACTILE (5)
S476	1-554-303-21	SWITCH, TACTILE (6)
S477	1-554-303-21	SWITCH, TACTILE (7)
S478	1-554-303-21	SWITCH, TACTILE (8)
S479	1-554-303-21	SWITCH, TACTILE (9)
S480	1-554-303-21	SWITCH, TACTILE (10)
S481	1-554-303-21	SWITCH, TACTILE (>10)
S482	1-554-303-21	SWITCH, TACTILE (MUSIC SCAN)
S483	1-554-303-21	SWITCH, TACTILE (CHECK)
S484	1-554-303-21	SWITCH, TACTILE (CLEAR)
S485	1-554-303-21	SWITCH, TACTILE (FADER)
S501	1-554-303-21	SWITCH, TACTILE (▶▶▶)
S502	1-554-303-21	SWITCH, TACTILE (◀◀◀)
S503	1-554-303-21	SWITCH, TACTILE (■)
S504	1-554-303-21	SWITCH, TACTILE (OPEN/CLOSE)
S505	1-554-303-21	SWITCH, TACTILE (DISC SKIP)
S506	1-554-303-21	SWITCH, TACTILE (EDIT TIME FADE)
S507	1-554-303-21	SWITCH, TACTILE (▶▶)
S508	1-554-303-21	SWITCH, TACTILE (◀◀)
S509	1-554-303-21	SWITCH, TACTILE (▷)

MAIN	DISPLAY	POWER SW	FUNCTION	TABLE MOTOR
------	---------	----------	----------	-------------

LOADING MOTOR	OPEN/UP SW
---------------	------------

Ref. No.	Part No.	Description	Remark
S510	1-554-303-21	SWITCH, TACTILE (II)	
S511	1-554-303-21	SWITCH, TACTILE (TIME)	
S512	1-554-303-21	SWITCH, TACTILE (REPEAT)	
S551	1-554-303-21	SWITCH, TACTILE (DISC 1)	
S552	1-554-303-21	SWITCH, TACTILE (DISC 2)	
S553	1-554-303-21	SWITCH, TACTILE (DISC 3)	
S554	1-554-303-21	SWITCH, TACTILE (DISC 4)	
S555	1-554-303-21	SWITCH, TACTILE (DISC 5)	
S556	1-554-303-21	SWITCH, TACTILE (CONTINUE)	
S557	1-554-303-21	SWITCH, TACTILE (SHUFFLE)	
S558	1-554-303-21	SWITCH, TACTILE (PROGRAM)	
S559	1-554-303-21	SWITCH, TACTILE (PEAK SEARCH)	
S560	1-572-714-11	SWITCH, PUSH (POWER ON/OFF)	

< CRYSTAL >

X351 1-567-965-11 VIBRATOR, CRYSTAL (22.5MHz)

- * 1-638-729-11 TABLE MOTOR BOARD

- * 1-638-730-11 LOADING MOTOR BOARD

- * 1-638-731-11 OPEN/UP SW BOARD

< CAPACITOR >

C704	1-161-375-00	CERAMIC	0.0022uF	20%	50V
C705	1-161-375-00	CERAMIC	0.0022uF	20%	50V

< CONNECTOR >

CN705	* 1-566-214-11	PIN, CONNECTOR (PC BOARD) 2P
CN707	* 1-573-044-11	SOCKET, CONNECTOR

< DIODE >

D701 8-719-970-19 DIODE GP1A521

< RESISTOR >

R701 1-249-416-11 CARBON 820 5% 1/4W

< SWITCH >

S702 1-571-300-21 SWITCH, ROTARY (OPEN/UP)

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	

9	1-590-834-11	WIRE, FLAT TYPE (13 CORE)	
10	1-590-835-11	WIRE, FLAT TYPE (34 CORE)	
54	1-452-340-21	MAGNET	
63	1-590-849-11	WIRE, FLAT TYPE (5 CORE)	
101	1-535-892-11	JUMPER, FILM (WITH TERMINAL)	
124	△ 1-590-836-11	CORD, POWER	
151	△ 8-848-144-11	DEVICE, OPTICAL KSS-240A	
152	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
M101	X-4917-523-3	MOTOR ASSY (SPINDLE)	
M102	X-4917-504-1	MOTOR ASSY (SLED)	
M701	A-4604-585-A	MOTOR ASSY, ROTARY (TABLE)	
M702	A-4604-834-A	MOTOR ASSY, LOADING	
S701	1-572-713-11	SWITCH, PUSH (WITH CONNECTOR) (DOWN)	
T901	△ 1-449-954-11	TRANSFORMER, POWER	

ACCESSORY & PACKING MATERIAL

- 1-465-730-11 REMOTE COMMANDER(RM-D515)(Include ※1)
- 1-559-533-11 CORD, CONNECTION
- ※1 3-707-584-01 COVER, BATTERY
- 3-753-145-22 MANUAL, INSTRUCTION (ENGLISH)
- 3-753-145-31 MANUAL, INSTRUCTION (FRENCH) (Canadian)
- 4-937-945-01 PLATE (TRANSPORT), LOCK
- * 4-944-109-31 INDIVIDUAL CARTON
- * 4-944-110-01 CUSHION (FRONT)
- * 4-944-111-01 CUSHION (REAR)

HARDWARE LIST

- # 1 7-685-647-79 SCREW +BVTP 3X10 TYPE2 N-S
- # 2 7-682-548-04 SCREW +BVTT 3X8 (S)
- # 3 7-682-547-04 SCREW +BVTT 3X6 (S)
- # 4 7-685-648-79 SCREW +BVTP 3X12 TYPE2 N-S
- # 5 7-682-554-04 SCREW +B 3X25
- # 6 7-685-648-79 SCREW (M3X12), TAPPING
- # 7 7-685-136-19 SCREW +P 2.6X12 TYPE2 NON-SLIT
- # 8 7-685-647-79 SCREW, TAPPING
- # 9 7-621-255-15 SCREW +P 2X3
- #10 7-685-134-19 SCREW +BTP 2.6X8 TYPE2 N-S

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.